



A Textron Company

OWNER'S MANUAL  
&  
SERVICE GUIDE



**ELECTRIC POWERED**

---

**FLEET GOLF CARS & PERSONAL VEHICLES**

**605681**

REVISED DECEMBER 2006

# SAFETY

For any questions on material contained in this manual, contact an authorized representative for clarification.


Read and understand all labels located on the vehicle. Always replace any damaged or missing labels.

On steep hills it is possible for vehicles to coast at greater than normal speeds encountered on a flat surface. To prevent loss of vehicle control and possible serious injury, speeds should be limited to no more than the maximum speed on level ground. See GENERAL SPECIFICATIONS. Limit speed by applying the service brake.

Catastrophic damage to the drivetrain components due to excessive speed may result from driving the vehicle above specified speed. Damage caused by excessive speed may cause a loss of vehicle control, is costly, is considered abuse and will not be covered under warranty.

Use extra caution when towing the vehicle(s). Do not tow a single vehicle at speeds in excess of 12 mph (19 kph). Do not tow more than three vehicles at a time. Do not exceed 5 mph (8 kph) while towing multiple vehicles. Towing the vehicle at above the recommended speed may result in personal injury and/or damage to the vehicle and other property. Vehicles equipped with Precision Drive System™ (PDS) must be towed with the Run-Tow/Maintenance switch, located under the passenger seat, in the 'Tow/Maintenance' position.

Signs similar to the ones illustrated should be used to warn of situations that could result in an unsafe condition

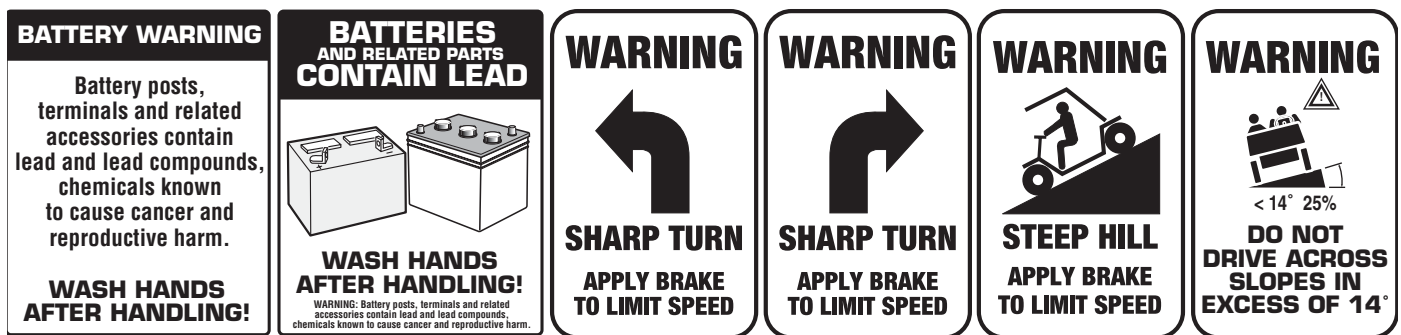

Be sure that this manual remains as part of the permanent service record should the vehicle be resold.

## NOTES, CAUTIONS AND WARNINGS

Throughout this guide **NOTE**, **CAUTION** and **WARNING** will be used.

### NOTE

A **NOTE** indicates a condition that should be observed.



### CAUTION

A **CAUTION** indicates a condition that may result in damage to the vehicle.



### WARNING

A **WARNING** indicates a hazardous condition that could result in severe injury or death.

Please observe these **NOTES**, **CAUTIONS** and **WARNINGS**; be aware that servicing a vehicle requires mechanical skill and a regard for conditions that could be hazardous. Improper service or repair may damage the vehicle or render it unsafe.



### WARNING

**Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.**

(NOTES, CAUTIONS AND WARNINGS CONTINUED ON INSIDE OF BACK COVER)

# OWNER'S MANUAL AND SERVICE GUIDE

## ELECTRIC POWERED FLEET GOLF CARS & PERSONAL VEHICLES

FLEET GOLF CAR

FREEDOM™ HP

FREEDOM™ SE

FREEDOM™ LE

FLEET PDS GOLF CAR

PDS FREEDOM™ SE

PDS FREEDOM™ LE

SHUTTLE™ 2+2

**STARTING MODEL YEAR 2007**

E-Z-GO Division of TEXTRON, Inc. reserves the right to make design changes without obligation to make these changes on units previously sold and the information contained in this manual is subject to change without notice.

E-Z-GO Division of TEXTRON, Inc. is not liable for errors in this manual or for incidental or consequential damages that result from the use of the material in this manual.

### TO CONTACT US

#### NORTH AMERICA:

**TECHNICAL ASSISTANCE & WARRANTY PHONE: 1-800-774-3946, FAX: 1-800-448-8124**

**SERVICE PARTS PHONE: 1-888-GET-EZGO (1-888-438-3946), FAX: 1-800-752-6175**

#### INTERNATIONAL:

**PHONE: 001-706-798-4311, FAX: 001-706-771-4609**

**E-Z-GO DIVISION OF TEXTRON, INC., 1451 MARVIN GRIFFIN ROAD, AUGUSTA, GEORGIA USA 30906-3852**

## **GENERAL INFORMATION**

This vehicle has been designed and manufactured in the United States of America (USA) as a 'World Vehicle'. The Standards and Specifications listed in the following text originate in the USA unless otherwise indicated.

The use of non Original Equipment Manufacturer (OEM) approved parts may void the warranty.

Overfilling batteries may void the warranty.

### **BATTERY PROLONGED STORAGE**

All batteries will self discharge over time. The rate of self discharge varies depending on the ambient temperature and the age and condition of the batteries.

A fully charged battery will not freeze in winter temperatures unless the temperature falls below -75° F (-60° C).

For winter storage, the batteries must be clean, fully charged and disconnected from any source of electrical drain. The battery charger and the controller are both sources of electrical drain. Unplug the battery charger DC plug from the vehicle receptacle.

On PDS vehicles, disconnect the controller from the battery set by selecting the 'TOW/ MAINTENANCE' position on the RUN-TOW/MAINTENANCE SWITCH located under the passenger seat.

As with all electric vehicles, the batteries must be checked and recharged as required or at a minimum of 30 day intervals.

# TABLE OF CONTENTS

<b>SAFETY</b> .....	<b>Inside covers</b>
<b>GENERAL INFORMATION</b> .....	<b>ii</b>
<b>SAFETY INFORMATION</b> .....	<b>vii</b>
<b>BEFORE INITIAL USE</b> .....	<b>1</b>
<i>Fig. 1 Initial Service Chart</i> .....	1
PORTABLE CHARGER INSTALLATION .....	1
<i>Fig. 2 Proper Charger Installation</i> .....	2
<i>Fig. 3 Charger Receptacle Location</i> .....	2
<b>CONTROLS AND INDICATORS</b> .....	<b>2</b>
KEY/LIGHT SWITCH .....	2
<i>Fig. 4 Key/Light Switch &amp; State of Charge Meter</i> .....	2
DIRECTION SELECTOR .....	3
<i>Fig. 5 Direction Selector Types</i> .....	3
STATE OF CHARGE METER .....	3
ACCELERATOR PEDAL .....	3
<i>Fig. 6 Accelerator and Brake Controls</i> .....	3
COMBINATION BRAKE AND PARK BRAKE PEDAL .....	3
RUN - TOW/MAINTENANCE SWITCH (PDS VEHICLES ONLY) .....	3
<i>Fig. 7 Run-Tow Maintenance Switch</i> .....	4
HORN .....	4
<i>Fig. 8 Horn Button</i> .....	4
<b>OPERATING THE VEHICLE</b> .....	<b>4</b>
PRECISION DRIVE SYSTEM™ .....	5
Performance Options .....	5
<i>Fig. 9 Performance Options</i> .....	5
Regenerative Braking.....	6
Pedal-Up Braking.....	6
Walk-Away Feature.....	6
Anti-Roll Back Feature .....	6
Anti-Stall Feature .....	6
High Pedal Disable Feature .....	6
Diagnostic Mode Feature.....	7
STARTING AND DRIVING .....	7
STARTING VEHICLE ON A HILL (Non PDS Vehicle) .....	7
COASTING .....	7
LABELS AND PICTOGRAMS .....	7
SUN TOP AND WINDSHIELD .....	8
<b>VEHICLE CLEANING AND CARE</b> .....	<b>8</b>
VEHICLE CLEANING .....	8
<b>REPAIR</b> .....	<b>8</b>
LIFTING THE VEHICLE .....	8
<i>Fig. 10 Lifting the Vehicle</i> .....	9
WHEELS AND TIRES .....	9
Tire Repair .....	9
Wheel Installation.....	10
<i>Fig. 11 Wheel Installation</i> .....	10
LIGHT BULB REPLACEMENT .....	10
<i>Fig. 12 Headlight, Turn Light and Marker Bulb Replacement</i> .....	10
<i>Fig. 13 Tail and Brake Light Bulb Replacement</i> .....	10
<b>TRANSPORTING VEHICLE</b> .....	<b>11</b>
TOWING .....	11
HAULING .....	11
<b>SERVICE AND MAINTENANCE</b> .....	<b>11</b>
SERIAL NUMBER PLATE & LOCATION .....	13

# TABLE OF CONTENTS

<i>Fig. 14 Serial Number Plate &amp; Location</i> .....	13
PERIODIC SERVICE SCHEDULE .....	14
<i>Fig. 15 Periodic Service Schedule</i> .....	14
TIRE INSPECTION .....	15
BRAKES .....	15
Periodic Brake Test for Mechanical Brakes .....	15
<i>Fig. 16 Typical Brake Performance Test</i> .....	16
REAR AXLE .....	16
<i>Fig. 17 Add, Check and Drain Axle Lubricant - Late Production</i> .....	16
Checking the Lubricant Level .....	16
LUBRICATION .....	17
<i>Fig. 18 Lubrication Points - Early Production</i> .....	17
<i>Fig. 19 Lubrication Points - Late Production</i> .....	17
PDS SYSTEM TEST .....	17
HARDWARE .....	17
CAPACITIES AND REPLACEMENT PARTS .....	17
<i>Fig. 20 Capacities and Replacement Parts</i> .....	17
<i>Fig. 21 Torque Specifications and Bolt Grades</i> .....	18
<b>BATTERIES AND CHARGING</b> .....	<b>18</b>
SAFETY .....	18
BATTERY .....	19
BATTERY MAINTENANCE .....	19
At Each Charging Cycle .....	19
Monthly .....	19
Electrolyte Level and Water .....	19
<i>Fig. 22 Correct Electrolyte Level</i> .....	19
<i>Fig. 23 Water Purity Table</i> .....	20
<i>Fig. 24 Automatic Watering Gun</i> .....	20
Battery Cleaning .....	20
<i>Fig. 25 Preparing Acid Neutralizing Solution</i> .....	21
Battery Replacement .....	21
<i>Fig. 26 Battery Connections</i> .....	21
Prolonged Storage .....	22
BATTERY CHARGING .....	22
<i>Fig. 27 Freezing Point of Electrolyte</i> .....	22
AC Voltage .....	23
TROUBLESHOOTING .....	23
Hydrometer .....	23
<i>Fig. 28 Hydrometer</i> .....	23
Using a Hydrometer .....	24
<i>Fig. 29 Hydrometer Temperature Correction</i> .....	24
BATTERY CHARGER MAINTENANCE .....	24
<i>Fig. 30 Cleaning Auxillary Contact in Charger Plug</i> .....	25
<b>GENERAL SPECIFICATIONS</b> .....	<b>27</b>
TXT ELECTRIC - FLEET .....	28
TXT PDS ELECTRIC - FLEET .....	29
TXT ELECTRIC - FREEDOM™ SE .....	30
TXT ELECTRIC - FREEDOM™ LE .....	31
TXT PDS ELECTRIC - FREEDOM™HP .....	32
TXT PDS ELECTRIC - FREEDOM™ SE .....	33
TXT PDS ELECTRIC - FREEDOM™ LE .....	34
TXT ELECTRIC - SHUTTLE 2+2 .....	35
<i>Fig. 36 Vehicle Dimensions</i> .....	36
<i>Fig. 37 Vehicle Dimensions, Incline Specifications and Turning Clearance Diameter</i> .....	37
<b>LIMITED WARRANTIES</b> .....	<b>39</b>
DOMESTIC WARRANTY .....	40
<b>LABELS AND PICTOGRAMS</b> .....	<b>Appendix A - 1</b>
<b>DECLARATION OF CONFORMITY (EUROPE ONLY)</b> .....	<b>Appendix B - 1</b>
.....	2

# TABLE OF CONTENTS

.....3  
.....4  
.....5





# SAFETY INFORMATION

This manual has been designed to assist in maintaining the vehicle in accordance with procedures developed by the manufacturer. Adherence to these procedures and troubleshooting tips will ensure the best possible service from the product. To reduce the chance of personal injury or property damage, the following must be carefully observed:



## CAUTION

Certain replacement parts can be used independently and/or in combination with other accessories to modify an E-Z-GO-manufactured vehicle to permit the vehicle to operate at or in excess of 20mph. When an E-Z-GO-manufactured vehicle is modified in any way by the Distributor, Dealer or customer to operate at or in excess of 20mph, UNDER FEDERAL LAW the modified product will be a Low Speed Vehicle (LSV) subject to the strictures and requirements of Federal Motor Vehicle Safety Standard 571.500. In these instances, pursuant to Federal law the Distributor or Dealer MUST equip the product with headlights, rear lights, turn signals, seat belts, top, horn and all other modifications for LSV's mandated in FMVSS 571.500, and affix a Vehicle Identification Number to the product in accordance with the requirements of FMVSS 571.565. Pursuant to FMVSS 571.500, and in accordance with the State laws applicable in the places of sale and use of the product, the Distributor, Dealer or customer modifying the vehicle also will be the Final Vehicle Manufacturer for the LSV, and required to title or register the vehicle as mandated by State law.

E-Z-GO will NOT approve Distributor, Dealer or customer modifications converting E-Z-GO products into LSV's.

The Company, in addition, recommends that all E-Z-GO products sold as personal transportation vehicles BE OPERATED ONLY BY PERSONS WITH VALID DRIVERS LICENSES, AND IN ACCORDANCE WITH APPLICABLE STATE REQUIREMENTS. This restriction is important to the SAFE USE AND OPERATION of the product. On behalf of E-Z-GO, I am directing that E-Z-GO Branch personnel, Distributors and Dealers advise all customers to adhere to this SAFETY RESTRICTION, in connection with the use of all products, new and used, the Distributor or Dealer has reason to believe may be operated in personal transportation applications.

Information on FMVSS 571.500 can be obtained at Title 49 of the Code of Federal Regulations, section 571.500, or through the Internet at the website for the U.S. Department of Transportation - at Dockets and Regulation, then to Title 49 of the Code of Federal Regulations (Transportation).

## GENERAL

Many vehicles are used for a variety of tasks beyond the original intended use of the vehicle; therefore, it is impossible to anticipate and warn against every possible combination of circumstances that may occur. No warnings can take the place of good common sense and prudent driving practices.

Good common sense and prudent driving practices do more to prevent accidents and injury than all of the warnings and instructions combined. The manufacturer strongly suggests that all users and maintenance personnel read this entire manual paying particular attention to the CAUTIONS and WARNINGS contained therein.

If you have any questions regarding this vehicle, contact your closest representative or write to the address on the back cover of this publication, Attention: Product Service Department.

The manufacturer reserves the right to make design changes without obligation to make these changes on units previously sold and the information contained in this manual is subject to change without notice.

The manufacturer is not liable for errors in this manual or for incidental or consequential damages that result from the use of the material in this manual.

This vehicle conforms to the current applicable standard(s) for safety and performance requirements.

These vehicles are designed and manufactured for off-road use. They do not conform to Federal Motor Vehicle Safety Standards of the United States of America (USA) and are not equipped for operation on public streets. Some commu-

# SAFETY INFORMATION

nities may permit these vehicles to be operated on their streets on a limited basis and in accordance with local ordinances.

With electric powered vehicles, be sure that all electrical accessories are grounded directly to the battery (-) post. **Never use the chassis or body as a ground connection.**

Refer to GENERAL SPECIFICATIONS for vehicle seating capacity.

**Never modify the vehicle in any way that will alter the weight distribution of the vehicle, decrease its stability or increase the speed beyond the factory specification. Such modifications can cause serious personal injury or death.** Modifications that increase the speed and/or weight of the vehicle will extend the stopping distance and may reduce the stability of the vehicle. Do not make any such modifications or changes. The manufacturer prohibits and disclaims responsibility for any such modifications or any other alteration which would adversely affect the safety of the vehicle.

Vehicles that are capable of higher speeds must limit their speed to no more than the speed of other vehicles when used in a golf course environment. Additionally, speed should be further moderated by the environmental conditions, terrain and common sense.

## GENERAL OPERATION

Always use the vehicle in a responsible manner and maintain the vehicle in safe operating condition.

Always read and observe all warnings and operation instruction labels affixed to the vehicle.

Always follow all safety rules established in the area where the vehicle is being operated.

Always reduce speed to compensate for poor terrain or conditions.

Always apply service brake to control speed on steep grades.

Always maintain adequate distance between vehicles.

Always reduce speed in wet areas.

Always use extreme caution when approaching sharp or blind turns.

Always use extreme caution when driving over loose terrain.

Always use extreme caution in areas where pedestrians are present.

## MAINTENANCE

Always maintain the vehicle in accordance with the manufacturer's periodic service schedule.

Always ensure that repairs are performed by those that are trained and qualified to do so.

Always follow the manufacturer's maintenance procedures for the vehicle. Be sure to disable the vehicle before performing any maintenance. Disabling includes removing the key from the key switch and removal of a battery wire.

Always insulate any tools used within the battery area in order to prevent sparks or battery explosion caused by shorting the battery terminals or associated wiring. Remove the batteries or cover exposed terminals with an insulating material.

Always check the polarity of each battery terminal and be sure to rewire the batteries correctly.

Always use specified replacement parts. Never use replacement parts of lesser quality.

# SAFETY INFORMATION

Always use recommended tools.

Always determine that tools and procedures not specifically recommended by the manufacturer will not compromise the safety of personnel nor jeopardize the safe operation of the vehicle.

Always support the vehicle using wheel chocks and jack stands. Never get under a vehicle that is supported by a jack. Lift the vehicle in accordance with the manufacturer's instructions.

Always maintain the vehicle in an area away from exposed flame or persons who are smoking.

Always be aware that a vehicle that is not performing as designed is a potential hazard and must not be operated.

Always test drive the vehicle after any repairs or maintenance. All tests must be conducted in a safe area that is free of both vehicular and pedestrian traffic.

Always replace damaged or missing warning, caution or information labels.

Always keep complete records of the maintenance history of the vehicle.

The manufacturer cannot anticipate all situations, therefore people attempting to maintain or repair the vehicle must have the skill and experience to recognize and protect themselves from potential situations that could result in severe personal injury or death and damage to the vehicle. Use extreme caution and, if unsure as to the potential for injury, refer the repair or maintenance to a qualified mechanic.

## VENTILATION

Hydrogen gas is generated in the charging cycle of batteries and is explosive in concentrations as low as 4%. Because hydrogen gas is lighter than air, it will collect in the ceiling of buildings necessitating proper ventilation. Five air exchanges per hour is considered the minimum requirement.

Never charge a vehicle in an area that is subject to flame or spark. Pay particular attention to natural gas or propane water heaters and furnaces.

Always use a dedicated circuit for each battery charger. Do not permit other appliances to be plugged into the receptacle when the charger is in operation.

Chargers must be installed and operated in accordance with charger manufacturers recommendations or applicable electrical code (whichever is higher).



# SAFETY INFORMATION

The following text is provided as recommended by part II of ANSI/ITSDF B56.8 - 2006. The manufacturer strongly endorses the contents of this specification.

## 6 GENERAL SAFETY PRACTICES

### 6.1 Introduction

**6.1.1** Like other machines, carriers can cause injury if improperly used or maintained. Part II contains broad safety practices applicable to carrier operation. Before operation, the user shall establish such additional specific safety practices as may reasonably be required for safe operation.

**6.1.2** Premise review — The user shall periodically review their premises, and as conditions warrant, identify areas where carriers should not be operated and to identify possible hazards such as the following examples:

- a) Steep Grade — In areas where steep grades exist, carrier operation should be restricted to the designated vehicle's pathways where possible, and shall be identified with a suitable warning giving the following information: "Warning, steep grade."
- b) Wet Areas — Wet areas could cause a carrier to lose traction and could affect steering, stability and braking.
- c) Sharp Turns, Blind Spots, Bridge Approaches — Sharp turns, blind spots, bridge approaches, and other potentially hazardous areas shall be identified with a suitable warning to the operator of the nature of the hazard and stating the proper precautions to be taken to avoid the hazard.
- d) Loose Terrain — Loose terrain could cause a carrier to lose traction and could affect steering, stability, and braking.

### 6.2 Operation

Experience has shown that carriers, which comply with the provisions, stated in paragraph 9.3.9 are stable when properly operated and when operated in accordance with specific safety rules and practices established to meet actual operating terrain and conditions. However, improper operation, faulty maintenance, or poor housekeeping may contribute to a condition of instability and defeat the purpose of the standard. Some of the conditions which may affect stability are failure of the user to follow safety practices; also, ground and floor conditions, grade, speed, loading, the operation of the carrier with improper loads, battery weight, dynamic and static forces, and the judgment exercised by the carrier operator.

- a) The user shall train carrier operators to adhere strictly to the operating instructions stated in this Standard.
- b) The user shall survey specific operating conditions and environment, and establish and train carrier operators to comply with additional, specific safety practices.

### 6.3 Nameplates, Markings, Capacity, and Modifications

**6.3.1** The user shall maintain in a legible condition all nameplates, warnings, and instructions, which are supplied by the manufacturer.

**6.3.2** Except as provided in 6.3.4, no modifications or alterations to a carrier, which may affect the capacity, stability, or safe operation of the carrier, shall be made without the prior written approval of the original carrier manufacturer or a successor thereof. When the carrier manufacturer or its successor approves a modification or alteration, appropriate changes shall be made to capacity plates, decals, tags, and operation and maintenance manuals

**6.3.3** As required under paragraphs 6.3.1 or 6.3.2, the manufacturer shall be contacted to secure new nameplates, warnings, or instructions, which shall then be affixed in their proper place on the carrier.

**6.3.4** In the event that the carrier manufacturer is no longer in business and there is no successor in interest to the business, the user may arrange for a modification or alteration to a carrier, provided however, the controlling party shall:

- (1) Arrange for the modification or alteration to be designed, tested, and implemented by an engineer(s) expert in carrier(s) and their safety;

# SAFETY INFORMATION

- (2) Maintain a permanent record of the design, test(s), and implementation of the modification or alteration;
- (3) Make appropriate changes to the capacity plate(s), decals, tags, and operation and maintenance manuals;
- (4) Affix a permanent and readily visible label on the carrier stating the manner in which the carrier has been modified or altered together with the date of the modification or alteration, and the name of the organization that accomplished the tasks.

## 6.4 Fuel Handling and Storage

**6.4.1** The user shall supervise the storage and handling of liquid fuels (when used) to be certain that it is in accordance with ANSI/NFPA 505 and ANSI/NFPA 30 or as required by local ordinance.

**6.4.2** Storage and handling of liquefied petroleum gas fuels shall be in accordance with ANSI/NFPA 505 and ANSI/NFPA 58 or as required by local ordinance. If such storage or handling is not in compliance with these standards, the user shall prevent the carrier from being used until such storage and handling is in compliance with these standards.

**6.4.3** Prevent fire and explosion caused by static electric discharge. Use only non-metal, portable fuel containers approved by the Underwriter's Laboratory (U.L.) or the American Society for Testing & Materials (ASTM). If using a funnel, make sure it is plastic and has no screen or filter.

Static electric discharge can ignite gasoline vapors in an ungrounded fuel container. Remove the fuel container from the bed of a carrier or the trunk of a car and place on the ground away from the carrier before filling. Keep nozzle in contact with container opening while filling. When practical, remove equipment from trailers or truck beds and re-fuel them on the ground. If this is not possible, use a portable, plastic fuel container to refuel equipment on a truck bed or trailer.

## 6.5 Changing and Charging Storage Batteries for Electric Personnel and Burden Carriers

**6.5.1** The user shall require battery changing and charging facilities and procedures to be in accordance with ANSI/NFPA 505 or as required by local ordinance.

**6.5.2** The user shall periodically inspect facilities and review procedures to be certain that ANSI/NFPA 505 or as required by local ordinance, are strictly complied with, and shall familiarize carrier operators with it.

**6.5.3** Maintenance and storage areas for carriers shall be properly ventilated to avoid fire hazards in accordance with applicable fire codes and ordinances.

Ventilation for internal combustion engine powered carriers shall be provided to remove flammable vapors (gases), fumes and other flammable materials. Consult applicable fire codes for specific levels of ventilation.

Ventilation for electric powered carriers shall be provided to remove the accumulation of flammable hydrogen gas emitted during the battery charging process. The amount of hydrogen gas emitted depends upon a number of factors such as the condition of the batteries, the output rate of the battery charger and the amount of time the batteries are on charge. Because of the highly volatile nature of hydrogen gas and its propensity to accumulate in pockets, a minimum number of air changes per hour is required during charging.

Consult applicable fire and safety codes for the specific ventilation levels required as well as the use of explosion proof electrical apparatus. SAE J1718 can be followed to check for hydrogen gas levels.

## 6.6 Hazardous Locations

**6.6.1** The user shall determine the hazard classification of the particular atmosphere or location in which the carrier is to be used in accordance with ANSI/NFPA 505.

**6.6.2** The user shall permit in hazardous areas only those carriers approved and of the type required by ANSI/NFPA 505.

## 6.7 Lighting for Operating Area

The user, in accordance with his responsibility to survey the environment and operating conditions, shall determine if

# SAFETY INFORMATION

the carrier requires lights and, if so, shall equip the carrier with appropriate lights.

## 6.8 Control of Noxious Gases and Fumes

When equipment powered by internal combustion engines is used in enclosed areas, the atmosphere shall be maintained within limits specified in the American Conference of Governmental Industrial Hygienists publication, "Threshold Limit Values for Chemical Substances and Physical Agents in the Workroom Environment." This may be accomplished by ventilation maintenance of emission control equipment recommended or provided by the manufacturer of the equipment.

## 6.9 Warning Device(s)

**6.9.1** The user shall make periodic inspections of the carrier to be certain that the sound-producing and/or visual device(s) if so equipped are maintained in good operating condition.

**6.9.2** The user shall determine if operating conditions require the carrier to be equipped with additional sound-producing or visual devices or both and be responsible for providing and maintaining such devices, in accordance with the manufacturer's recommendations.

## 6.10 Safety Interlocks

The user shall make periodic inspections of the carrier to be certain that the safety interlock system, if so equipped, is operating properly.

## 7 OPERATING SAFETY RULES AND PRACTICES

### 7.1 Personnel and Burden Carrier Operator Qualifications

Only persons who are trained in the proper operation of the carrier shall be authorized to operate the carrier. Operators shall be qualified as to visual, auditory, physical, and mental ability to safely operate the equipment according to Section 7, all other applicable parts of this Standard and the operators' manual.

### 7.2 Personnel and Burden Carrier Operators' Training

**7.2.1** The user shall conduct an operators' training program.

**7.2.2** Successful completion of the operators' training program by the operator shall be required before operation of the carrier. The program shall be presented in its entirety to all-new operators and not condensed for those claiming previous experience.

**7.2.3** The user shall include as a minimum in the operators' training program the following.

- a) Instructional material provided by the manufacturer including the operators' manual;
- b) Emphasis on safety of passengers, material loads, carrier operator, and other person(s);
- c) General safety rules contained within this Standard and the additional specific rules determined by the user in accordance with this Standard, and why they were formulated;
- d) Introduction of equipment, control locations of the environment which could affect carrier operation;
- e) Operator competency evaluations.

### 7.3 Personnel and Burden Carrier Operator Responsibility

#### 7.3.1 General Operator Responsibility

**7.3.1.1** Read and follow operators' manual

**7.3.1.2** Do not operate carrier under the influence of drugs and alcohol.

# SAFETY INFORMATION

**7.3.1.3** Safeguard the pedestrians at all times. Do not drive carrier in a manner that would endanger other persons.

**7.3.1.4** Riding on the carrier by persons other than the operator is authorized only on personnel seat(s) provided by the manufacturer. All parts of each person's body shall remain within the plan view outline of the carrier.

**7.3.1.5** When a carrier is to be left unattended, stop the carrier, apply the parking brake, stop the engine or turn off power, turn off the control or ignition circuit, and remove the key if provided. Additionally, for the electric carriers, the forward and reverse directional controls, should be neutralized if a means is provided. Block the wheels if the carrier is on an incline.

**7.3.1.6** A carrier is considered unattended when the operator is 7.6m (25 ft.) or more from the carrier which remains in his view, or whenever the operator leaves the carrier and it is not within his view. When the operator is dismounted and within 7.6m (25 ft.) of the carrier still in his view, he still must have controls neutralized, and the parking brake(s) set to prevent movement.

**7.3.1.7** Maintain a safe distance from potential hazards, such as edges of ramps and platforms.

**7.3.1.8** Use only approved carriers in hazardous locations, as defined in the appropriate safety standards.

**7.3.1.9** Report all accidents to the user.

**7.3.1.10** Do not add to, or modify, the carrier.

**7.3.1.11** Carriers shall not be parked or left unattended such that they block or obstruct fire aisles, access to stairways, or fire equipment.

**7.3.1.12** Only operate carrier while within operator's station.

## 7.3.2 Traveling

**7.3.2.1** Observe all traffic regulations, including authorized speed limits. Under normal traffic conditions keep to the right. Maintain a safe distance, based on speed of travel, from a carrier or vehicle ahead, and keep the carrier under control at all times.

**7.3.2.2** Yield the right of way to pedestrians, ambulances, fire trucks, or other carriers or vehicles in emergency situations.

**7.3.2.3** Do not pass another carrier or vehicle traveling in the same direction at intersections, blind spots, or at other dangerous locations.

**7.3.2.4** Keep a clear view of the path of travel, observe other traffic and personnel, and maintain a safe clearance.

**7.3.2.5** Slow down or stop, as conditions dictate, and activate the sound-producing warning device at cross aisles and when visibility is obstructed at other locations.

**7.3.2.6** Ascend or descend grades slowly.

**7.3.2.7** Avoid turning, if possible, and use caution on grades, ramps, or inclines, normally travel straight up and down.

**7.3.2.8** Under all travel conditions the carrier shall be operated at a speed that will permit it to be brought to a stop in a safe manner.

**7.3.2.9** Make starts, stops, turns, or direction reversals in a smooth manner so as not to shift the load, endanger passengers, or lose control of the carrier.

**7.3.2.10** Do not operate carrier in a dangerous manner.

**7.3.2.11** Slow down when approaching, or on, wet or slippery surfaces.

**7.3.2.12** Do not drive carrier onto any elevator unless specifically authorized to do so. Approach elevators slowly, and then enter squarely after the elevator car is properly leveled. Once on the elevator, neutralize the controls, shut off power, and set parking brakes. It is advisable that all other personnel leave the elevator before a carrier is allowed to enter or exit.

**7.3.2.13** Avoid running over loose objects, potholes, and bumps.

**7.3.2.14** Reduce carrier speed to negotiate turns.

**7.3.2.15** Avoid any action verbal or physical by an operator or passenger, which could cause the operator to be distracted.

## 7.3.3 Loading

**7.3.3.1** Refer to operators' manual for loading instruction.

**7.3.3.2** Handle only stable and safely arranged loads. When handling off-center loads, which cannot be centered, operate with extra caution.



# SAFETY INFORMATION

**7.3.3.3** Handle only loads within the capacity of each cargo area of the carrier as specified by the manufacturer.

**7.3.3.4** Avoid material loads exceeding the physical dimensions of the carrier or as specified by the carrier manufacturer.

## 7.3.4 Operator Care of Personnel and Burden Carriers

**7.3.4.1** Read and follow operators' manual.

**7.3.4.2** At the beginning of each shift during which the carrier will be used, the operator shall check the carrier condition and inspect the tires, warning devices, lights, battery(s), speed and directional controllers, brakes, safety interlocks, and steering mechanism. If the carrier is found to be in need of repair, or in any way unsafe, the matter shall be reported immediately to the user and the carrier shall not be operated until it has been restored to safe operating condition.

**7.3.4.3** If during operation the carrier becomes unsafe in any way, the matter shall be reported immediately to the user, and the carrier shall not be operated until it has been restored to safe operating condition.

**7.3.4.4** Do not make repairs or adjustments unless specifically trained and authorized to do so.

**7.3.4.5** Before refueling, the engine shall be stopped and allowed to cool. The operator and passengers shall leave the carrier before refueling.

**7.3.4.6** Spillage of hazardous materials shall be contained immediately and addressed via appropriate hazardous materials regulations.

**7.3.4.7** Do not operate a carrier with a leak in the fuel system or battery(s). Battery(s) shall be charged and serviced per manufacturer's instructions.

**7.3.4.8** Do not use open flames for checking electrolyte level in storage battery(s) or liquid level in fuel tanks.

## 8 MAINTENANCE PRACTICES

### 8.1 Introduction

Carriers may become hazardous if maintenance is neglected. Maintenance facilities, trained personnel, and procedures shall be provided. Such facilities may be on or off the premises.

### 8.2 Maintenance Procedures

Maintenance and inspection of all carriers shall be performed in conformance with the following practices and should follow the manufacturer's recommendations.

- a) A scheduled preventive maintenance, lubrication, and inspection system shall be followed.
- b) Only trained and authorized personnel shall be permitted to maintain, repair, adjust, and inspect carriers.
- c) Before undertaking maintenance or repair follow the manufacturer's recommendations for immobilizing the carrier.
- d) Chock wheels and support carrier, before working underneath it.
- e) Before disconnecting any part of the engine fuel system, be sure the shutoff valve, if so equipped, is closed and follow carrier manufacturer's recommended practice.
- f) Operation to check performance of the carrier shall be conducted in an authorized area where suitable conditions exist, free of vehicular and pedestrian traffic.
- g) Before returning carrier to service, follow the manufacturer's instructions and recommended procedure.
- h) Avoid fire hazards and have fire protection equipment present in the work area. Do not use an open flame to check level or leakage of fuel, battery electrolyte, or coolant.
- i) Properly ventilate the work area in accordance with applicable regulations or local ordinance.
- j) Handle fuel cylinders with care. Physical damage, such as dents, scrapes, or gouges, may dangerously weaken the tank and make it unsafe for use.
- k) Brakes, steering mechanisms, speed and directional control mechanisms, warning devices, lights, governors, guards, and safety devices shall be inspected regularly and maintained in accordance with manufacturer's recommendations.

## **SAFETY INFORMATION**

- l) Special carriers or devices designed and approved for hazardous area operation shall be inspected to ensure that maintenance preserves the original approved safe operating features.
- m) Fuel systems shall be checked for leaks and condition of parts. If a leak is found, action shall be taken to prevent the use to the carrier until the cause of the leak has been repaired.
- n) The carrier manufacturer's capacity, operation, and maintenance instruction plated, tags, or decals shall be maintained in legible condition.
- o) Batteries, motors, speed and directional controllers, limit switches, protective devices, electrical conductors/insulators, and connections shall be inspected and maintained per carrier manufacturer's recommendation.
- p) Carriers shall be kept in a clean condition to minimize hazards and facilitate detection of components needing service.
- q) Modifications and additions which affect capacity and safe carrier operation shall not be performed without manufacturer's prior written authorization; where authorized modifications have been made, the user shall ensure that capacity, operation, warning, and maintenance instruction plates, tags, or safety labels are changed accordingly.
- r) Care shall be taken to ensure that all replacement parts are interchangeable with the original parts and of a quality at least equal to that provided in the original equipment.
- s) Disconnect batteries, negative connection(s) first. When reconnecting, connect positive connection first.
- t) Hydraulic systems, if so equipped, shall be checked for leaks, for condition of parts. Keep body and hands away from pin-holes or nozzles that eject fluids under high pressure. Use paper or cardboard, not hands, to check for leaks.

### **ANSI/ITSDF B56.8 - 2006**

# SAFETY INFORMATION

*Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings*

The following text is provided as recommended by part II of ANSI / NGCMA Z130.1 - 2004. E-Z-GO, as a member of the National Golf Car Manufacturers Association (NGCMA), strongly endorses the contents of this specification.

## PART II

### MAINTENANCE AND OPERATIONS

#### 5. GENERAL SAFETY PRACTICES

##### 5.1. Introduction

Like other vehicles, golf cars can cause injury if improperly used or maintained. Part II contains broad safety practices recommended for safe golf car operations. Before operation, the controlling party should establish such additional specific safety practices as may be reasonably required for safe operations.

Experience has shown that golf cars that comply with the provisions stated in Part III of this standard are safe when properly operated in accordance with the safety and operation warnings affixed to every golf car. Safe operation is enhanced when the golf cars are operated within a specific set of operation instructions, safety rules and practices established to meet actual operating terrain and conditions.

The safety information contained in Part II is intended to enable the controlling party to implement a golf car safety program.

It is suggested and recommended that Part II be reprinted in the golf car manufacturer's operation and service manuals to encourage safe operations and practices at the controlling party's facility.

##### 5.2. Safety Survey

The controlling party shall perform a safety survey of its premises periodically, and as conditions warrant, identify areas where golf cars should not be operated and possible hazards exist. See, for example, 5.2.1. See also NGCMA *Golf Course Safety Guidelines* and NGCMA *Golf Car Storage Facility Safety Guidelines*.

###### 5.2.1. Grades

All grades shall be descended at a reduced speed. Excessive speed while descending grades adversely affects the stability of the golf car and its ability to stop. In areas where steep grades exist, golf car operations should be restricted to designated golf car paths and roads where possible. Steep grades shall be identified with a suitable warning giving the following information: "**Warning, steep hill, apply brake to limit speed.**" Avoid parking on steep hills. Avoid sharp turns on grades. Provide flat surface parking areas adjacent to golf car paths on steep grades.

###### 5.2.2. Wet areas or icy terrain

Extreme caution should be used when driving on wet or icy terrain. Wet grassy areas or ice may cause a golf car to lose traction and may affect operator control. Wet or icy areas should be chained or roped off to prevent golf car operations or be identified by a suitable warning to operators not to operate golf cars in that area.

# SAFETY INFORMATION

*Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings*

## **5.2.3. Sharp Turns, Blind Corners, Bridge Approaches**

All turns shall be negotiated at a reduced speed. Negotiating a turn can affect the stability and control of a golf car, causing loads and passengers to shift. Sharp turns, blind spots, bridge approaches, and other potentially hazardous areas shall be closed off to prevent golf car operation or shall be identified with a suitable warning to the operator of the nature of the hazard, stating the proper precautions to be taken to avoid the hazard.

## **5.2.4. Loose Terrain**

Extreme caution shall be used when driving in areas of loose terrain. Loose terrain, for example, sand or gravel, can cause a golf car to lose traction and may affect stability. Areas of loose terrain should be repaired if possible, or closed off to prevent golf car operation, or identified by a suitable warning to operators not to operate golf cars in those areas.

## **5.2.5. Golf Car/Pedestrian Interaction Areas**

Areas where pedestrians and golf cars could interact should be avoided by rerouting the golf car traffic or the pedestrian traffic. If avoidance of the interaction is not possible or is highly impractical, signs shall be erected warning pedestrians of the golf car traffic. Signs shall also be erected warning golf car operators of the pedestrian traffic and to drive slowly and with caution.

## **6. MAINTENANCE**

### **6.1. Introduction**

Golf cars may become hazardous if maintenance is neglected or improperly performed. Proper maintenance facilities, trained personnel and maintenance procedures, in accordance with the manufacturer's recommendations, shall be provided by the controlling party.

### **6.2. Preventive Maintenance**

A regularly scheduled inspection and preventive maintenance program in accordance with the manufacturer's recommendations should be established. Such a program will be a valuable tool in providing the golfing patron with a safe, properly operating golf car.

#### **6.2.1. Personnel**

Only qualified, trained and authorized personnel shall be permitted to inspect, adjust and maintain golf cars.

#### **6.2.2. Parts and Materials**

Manufacturer's recommended replacement parts and materials should be used.

#### **6.2.3. Maintenance and repair safety procedures**

All maintenance shall be performed in accordance with the manufacturer's recommended maintenance and safety procedures as outlined in the manufacturer's operation and service manuals. For example:

a) Follow manufacturer's instructions for immobilizing golf car before beginning any maintenance;

# SAFETY INFORMATION

*Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings*

- b) Block chassis before working underneath golf car;
- c) Before disconnecting any part of the fuel system, drain the system and turn all valves, if so equipped, to the "off" position to prevent leakage or accumulation of flammable fuels;
- d) Avoid fire hazards and have fire protection equipment available;
- e) Before performing any maintenance on an electric golf car, disconnect the electrical system in accordance with the manufacturer's instructions;
- f) Use only properly insulated tools when performing maintenance;
- g) Periodically inspect and maintain brakes, steering mechanisms, warning devices, governors, safety decals and all other safety devices and maintain them in a safe operating condition. Do not modify these devices unless instructed to do so by the manufacturer;
- h) After each maintenance or repair, have the golf car driven by qualified and trained personnel to ensure proper operation and adjustment; perform validation checks in an area that is free of vehicular and pedestrian traffic;
- i) Record all maintenance performed in a maintenance record log by date, name of person performing maintenance and type of maintenance. Controlling Party should periodically inspect maintenance log to ensure currency and completeness of entries.

## **6.2.4.**

The controlling party shall maintain all Danger, Warning and Caution labels, (collectively and individually "safety labels"); nameplates; serial numbers; and instructions, when supplied by the manufacturer, in a legible condition.

## **6.2.5.**

The controlling party shall not perform or allow to be performed, any modification or addition to the vehicle that affects capacity or safe operation, or make any change not in accordance with the manufacturer's operations and service manuals, without the manufacturer's prior written authorization. Where authorized modifications have been made, the controlling party shall ensure that capacity, operation, warning, and maintenance instruction plates, tags, or decals are changed accordingly.

## **6.2.6.**

As required in 6.2.4, the manufacturer shall be contacted to secure new nameplates, warnings, or safety labels, as necessary, which shall be affixed in their proper place on the golf car if and as designated in the owner's manual.

## **7. FUELS HANDLING AND STORAGE/BATTERY CHARGING**

### **7.1. Ventilation**

Maintenance and storage areas shall be properly ventilated to avoid fire hazards in accordance with applicable fire codes and ordinances.

Ventilation for internal combustion engine golf cars shall be provided to remove flammable vapors, fumes and other flammable materials. Consult applicable fire codes for specific levels of ventilation.

# SAFETY INFORMATION

*Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings*

Ventilation for electric-powered golf cars shall be provided, to remove the accumulation of flammable hydrogen gas emitted during the charging process. Because of the highly volatile nature of hydrogen gas and its propensity to rise and accumulate at the ceiling in pockets, a minimum of 5 air changes per hour is recommended for multiple vehicles and one air change per hour may be adequate for one vehicle. The controlling party shall consult applicable fire and safety codes for the specific ventilation levels required. See NGCMA Golf Car Safety Storage Guidelines and SAE J1718.

- 7.2.** The controlling party shall require battery changing and charging facilities and procedures to be in accordance with applicable ordinances or regulations.
- 7.3.** The controlling party shall supervise the storage and handling of liquid fuels in accordance with ANSI/NFPA 30.
- 7.4.** Storage and handling of liquefied petroleum gas fuels shall be in accordance with ANSI/NFPA 58.
- 7.5.** TThe controlling party shall periodically inspect charging and storage areas or facilities and review procedures to be certain that the procedures in 7.1 through 7.4, inclusive, are being followed.

## **8. OPERATING SAFETY RULES AND PRACTICES**

### **8.1. Operator Qualifications**

- 8.1.1.** It is recommended that only persons qualified under the rules of the regulatory authority be allowed to operate a golf car. Qualifications may include proof of insurance, minimum age requirement or other appropriate requirements.
- 8.1.2.** The controlling party shall display the operation and safety instructions as recommended by the golf car manufacturers and the golf course safety rules in a conspicuous place near the golf car rental area or golf car pick-up area, or on each golf car, or both. It is also recommended that the warning "Do not operate golf car when under the influence of intoxicating or mind altering substances," be posted in a conspicuous location..

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

Thank you for purchasing this vehicle. Before driving the vehicle, we ask you to spend some time reading this Owner's Manual and Service Guide. This guide contains the information that will assist you in maintaining this highly reliable vehicle. Some illustrations may show items that are optional for your vehicle. This guide covers the operation of several vehicles; therefore, some pictorial views may not represent your vehicle. Physical differences in controls will be illustrated.

This vehicle has been designed and manufactured as a 'World Vehicle'. Some countries have individual requirements to comply with their specifications; therefore, some sections may not apply in your country.

Most of the service procedures in this guide can be accomplished using common automotive hand tools. Contact your service representative on servicing the vehicle in accordance with the Periodic Service Schedule.

Service Parts Manuals and Technician's Repair and Service Manuals are available from a local Distributor, an authorized Branch or the Service Parts Department. When ordering parts or requesting information for your vehicle, provide vehicle model, serial number and manufacture date code.

## BEFORE INITIAL USE

Read, understand and follow the safety label on the instrument panel. Be sure you understand how to operate the vehicle, its equipment and how to use it safely. Maintaining good performance depends to a large extent on the operator.

### WARNING

*Hydrogen gas is generated as a natural part of the lead acid battery charging process. A 4% concentration of hydrogen gas is explosive and could cause severe injury or death. Charging must take place in an area that is adequately ventilated (minimum of 5 air exchanges per hour).*

*To reduce the chance of battery explosion that could result in severe injury or death, never smoke around or charge batteries in an area that has open flame or electrical equipment that could cause an electrical arc.*

Before a new vehicle is put into operation, the items shown in the INITIAL SERVICE CHART must be performed (Ref Fig. 1 on page 1).

Vehicle batteries must be fully charged before initial use. Check for correct tire inflation. See GENERAL SPECIFICATIONS.

Determine and record braking distance required to stop vehicle for future brake performance tests.

Remove the protective clear plastic, that protect the seat bottom and back rest during shipping, before placing the vehicle in service.

ITEM	SERVICE OPERATION
Batteries	Charge batteries
Seats	Remove protective plastic covering
Brakes	Check operation and adjust if necessary
	Establish acceptable stopping distance (mechanical brakes only)
	Check hydraulic brake fluid level if equipped
Tires	Check air pressure (see SPECIFICATIONS)
Portable Charger	Remove from vehicle and properly mount

Ref Isc 5

Fig. 1 Initial Service Chart

## PORTABLE CHARGER INSTALLATION

### WARNING

*To prevent overheating that may cause serious damage to the charger and create the potential for fire, do not block or obstruct the airways. Portable chargers must be mounted on a platform above the ground or in such a manner as to permit the maximum air flow underneath and around the charger.*


Portable chargers are shipped with the vehicle. Prior to vehicle or charger operation, chargers must be removed and mounted on a platform or wall above the ground to permit maximum air flow around and underneath the charger. If the charger is operated in an outdoor location, rain and sun protection must be provided (Ref Fig. 2 on page 2). A dedicated circuit is required for the charger. Refer to the charger manual for appropriate circuit protection. The charger may remain plugged in to the AC outlet. To charge the vehicle, refer to the instruction labels on the charger. Insert the polarized DC plug completely into the vehicle receptacle (Ref Fig. 3 on page 2).

The charger will automatically start a few seconds after plug insertion. The charger will automatically stop when batteries are fully charged and the DC plug can be removed to permit use of the vehicle.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

Provide Protection From Elements

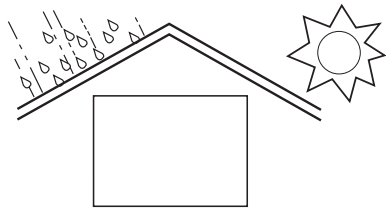

Do Not Block Louvered Airways




NEMA 15 - 5R Grounded AC Receptacle  
110 - 120 VAC. Dedicated 15 AMP Circuit

Locations outside the US and Canada: Reference appropriate local electrical code and charger manufacturer recommendations for AC power requirements

Ref Pci 1

**Fig. 2 Proper Charger Installation**

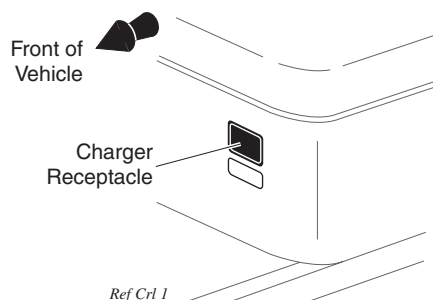

Ref Crl 1

**Fig. 3 Charger Receptacle Location**

## NOTE

Looping the DC cord through the steering wheel when charging, serves as a good reminder to store the cord out of the way when finished with charging. The DC plug can be damaged by driving over or catching the cord on the vehicle when driving away. A charging interlock feature on the PowerWise™ charger prevents vehicle operation while the DC plug is inserted in vehicle receptacle.

## WARNING

To prevent a physical hazard that could result in an electrical shock or electrocution, be sure that the charger plug is not damaged and is inserted into a grounded receptacle.

The power (AC) cord is equipped with a grounded plug, do not attempt to pull out, cut or bend the ground post.

The charging (DC) cord is equipped with a polarized connector which fits into a matching receptacle on the vehicle.

The power (AC) cord is equipped with a grounded plug. Do not attempt to remove, cut or bend the ground post.

## NOTE

If vehicle is to be charged with a non E-Z-GO charger, refer to the instructions supplied with the charger.


## CONTROLS AND INDICATORS

Vehicle controls and indicators consist of:

- key/light switch
- direction selector
- state of charge meter
- accelerator pedal
- combination service and park brake pedal
- run - tow/maintenance switch (PDS only)
- horn

### KEY/LIGHT SWITCH

Located on the dash panel, this switch enables the basic electrical system of the vehicle to be turned on and off by turning the key. To prevent inadvertent operation of the vehicle when left unattended, the key should be turned to the 'OFF' position and removed (Ref Fig. 4 on page 2).

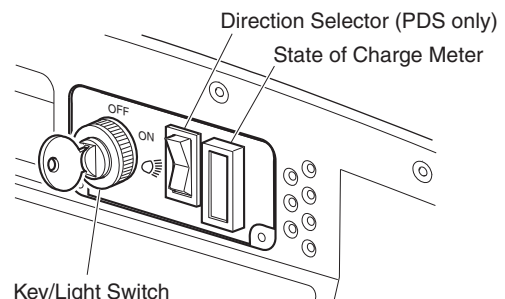

Ref Kes 1 Key/Light Switch

**Fig. 4 Key/Light Switch & State of Charge Meter**

If the vehicle is equipped with lights, the key switch has a position to operate them, indicated by the light icon.

## NOTE

If the vehicle is equipped with factory installed custom accessories, some accessories remain operational with the key switch in the 'OFF' position.



# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## DIRECTION SELECTOR

### WARNING

To prevent loss of control, do not move PDS vehicle direction selector while the vehicle is in motion. Moving the selector will result in a sudden slowing of the vehicle and the beeping of a warning device.

### CAUTION

To reduce the possibility of component damage, the vehicle must be completely stopped before moving the direction selector.

On PDS models, if the direction selector is shifted before the vehicle comes to a complete stop, a warning beeper will activate.

Located on the seat support panel or the dash panel, this lever or switch permits the selection of either 'F' (forward), 'R' (reverse) or neutral (the position between forward and reverse). Vehicle should be left in neutral when unattended (Ref Fig. 5 on page 3).

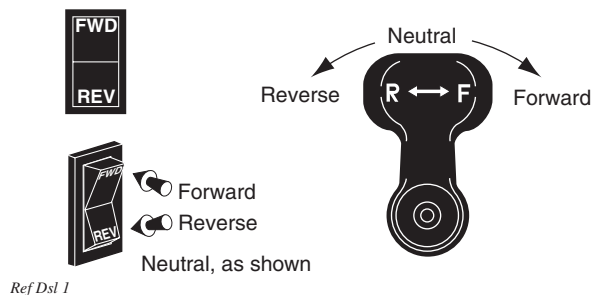


Fig. 5 Direction Selector Types

## STATE OF CHARGE METER

Located in the dash, the state of charge meter indicates the amount of usable power in the batteries (Ref Fig. 4 on page 2).

## ACCELERATOR PEDAL

### WARNING

Unintentional movement of the accelerator pedal will release the park brake and may cause the vehicle to move which could result in severe injury or death.

With the key switch 'ON', depressing the accelerator pedal starts the motor. When the pedal is released, the motor will stop (Ref Fig. 6 on page 3). To stop the vehicle more quickly, depress the service brake.

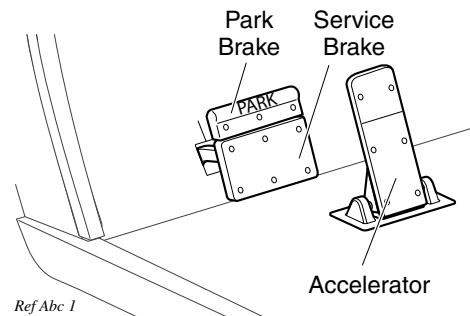


Fig. 6 Accelerator and Brake Controls

If key switch is 'ON' and park brake is set, depressing the accelerator inadvertently will release the park brake and will cause the vehicle to move which could cause severe injury or death.

Depressing the accelerator pedal will release the park brake if it is engaged. This is a feature to assure the vehicle is not driven with the park brake engaged. Depressing the accelerator pedal is **not** the preferred method of releasing the park brake.

### NOTE

Depressing the **lower section of the brake pedal** is the preferred method of releasing the park brake to assure the longest service life of brake components.

## COMBINATION BRAKE AND PARK BRAKE PEDAL

The brake pedal incorporates a park brake feature (Ref Fig. 6 on page 3). To engage, push down on the upper section of the pedal until it locks in place. The park brake will release when the service brake pedal is depressed. Use the lower section of the brake pedal to operate the service brake system.

## RUN - TOW/MAINTENANCE SWITCH (PDS VEHICLES ONLY)

### WARNING

To reduce the possibility of severe injury or death resulting from loss of vehicle control, consider the grade of the terrain the vehicle is on and set vehicle's park brake accordingly before switching the Run - Tow/Maintenance switch to the 'Tow/Maintenance' position. When in the 'Tow/Maintenance' position, the Anti-Roll Back and Walk-Away safety features of the PDS system no longer function.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## CAUTION

Before attempting to tow vehicle, move the Run-Tow/Maintenance switch to the 'Tow/Maintenance' position. Failure to do so will damage the controller or motor.

Before disconnecting or connecting a battery, or any other wiring, move the Run-Tow/Maintenance switch to the 'Tow/Maintenance' position.

After connecting a battery, or any other wiring, wait a minimum of 30 seconds before moving the Run-Tow/Maintenance switch to the 'Run' position.

The PDS vehicle is equipped with a two position switch located under the passenger side of the seat on the controller environmental cover (Ref Fig. 7 on page 4).

**WARNING**

← RUN →  
← TOW MAINTENANCE →

**TOWING**  
Always select 'TOW/MAINTENANCE' position before towing

■ Tampering with or unauthorized modification of this unit by non E-Z-GO personnel could result in serious personal injury, void the warranty and result in permanent damage to the vehicle

■ Possibility of electrical arc or battery explosion. Before removing/connecting batteries or electrical components, turn switch to 'TOW MAINTENANCE' position

■ To disable electrical system, place switch in 'TOW/MAINTENANCE' position and remove battery wire

■ After reconnecting batteries, allow a minimum of 30 seconds before selecting 'RUN' position

**THE FOLLOWING CODES REQUIRE THAT THE REAR WHEELS BE RAISED BEFORE PERFORMING TESTS**

Beep	Fault	Symptoms	Correction Required
1-1	Controller Failure	Vehicle will not run	Check motor wiring & motor Ω. Replace controller
1-2	Throttle fault	Solenoid clicks, will not run	Replace/adjust pedal box, harness
1-4	High pedal disable	Vehicle will not run	Release pedal/check pedal box, linkage & switch
2-4	Solenoid coil failure or disconnected	Vehicle will not run	Check coil connections/wiring, replace solenoid if required
3-1	Solenoid driver fail	Vehicle will not run	Check coil wiring for shorts, replace controller
3-3	Solenoid did not close	Vehicle will not run	Check all solenoid wiring, replace solenoid if required
3-4	Field winding open	Solenoid clicks, will not run	Check motor & controller field connections, replace power harness or motor if required
4-1	Armature open	Solenoid clicks, will not run	Check motor & controller armature connections, replace power harness or motor if required
4-3	Solenoid drop out	Vehicle stops	Check solenoid/wiring, replace if required

**THE FOLLOWING CODES REQUIRE THAT THE VEHICLE BE OPERATED UNDER LOAD WHILE PERFORMING TESTS**

Beep	Fault	Symptoms	Correction Required
1-3	Speed sensor fault	Vehicle runs slowly	Check speed sensor connections & magnet/torque, replace speed sensor if required
2-1	Low battery voltage	Vehicle performance reduced	Charge batteries/replace bad batteries
2-2	High battery voltage	Regen performance reduced	Check that battery voltage is less than 48 VDC
2-3	Thermal cutback	Vehicle performance reduced	Allow controller to cool, check heat sink bolt torque
3-2	Solenoid welded	Vehicle runs slowly	Check auxiliary power. Replace solenoid
4-2	Motor stalled	Vehicle stopped	Remove mechanical blockage

To enter diagnostic mode ◀ Turn key switch to 'OFF' ▶ Move 'RUN/TOW MAINTENANCE' switch to 'RUN'. ▶ Move direction selector switch from neutral position to 'REV' position five (5) times ▶ After a confirming beep(s) sounds, the diagnostic fault code will sound when a fault is detected. To exit diagnostic mode: Select 'TOW MAINTENANCE' position.

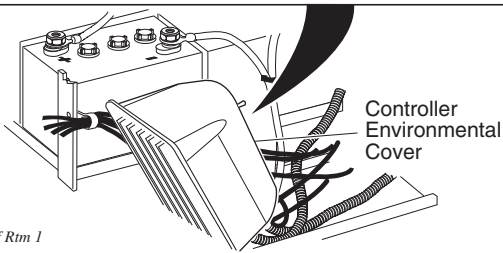


Fig. 7 Run-Tow Maintenance Switch

With the switch in 'TOW/MAINTENANCE' position:

- the controller is deactivated
- the electronic braking system is deactivated which allows the vehicle to be towed or roll freely
- the warning beeper is deactivated

With the switch in 'RUN' position:

- the controller is activated

- the electronic braking system and warning beeper features are activated

## NOTE

PDS vehicles operate only in the 'RUN' position.

The PDS is a low power consumption unit but it will drain the vehicle batteries over a period of time. If the vehicle is to be stored for a prolonged period of time, the PDS should be disconnected from the batteries. See 'Prolonged Storage' on page 22.

## HORN

The horn is operated by pushing the horn button located on the floor to the left of the brake pedal (Ref Fig. 8 on page 4).

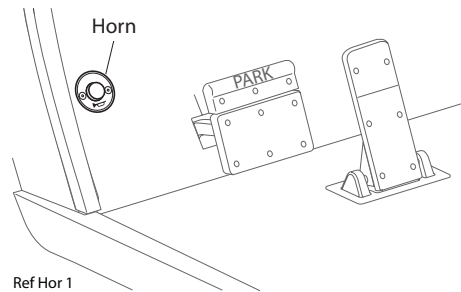


Fig. 8 Horn Button

## OPERATING THE VEHICLE

### CAUTION

Improper use of the vehicle or the lack of proper maintenance may result in damage or decreased performance.

Read and understand the following warnings before attempting to operate the vehicle.

### WARNING

To reduce the possibility of severe injury or death resulting from loss of vehicle control, the following warnings must be observed:

When driving vehicle, consider the terrain, traffic conditions and the environmental factors which effect the terrain and the ability to control the vehicle.

Use extra care and reduced speed when driving on poor surfaces, such as loose dirt, wet grass, gravel, etc.

Stay in designated areas and avoid extremely rough terrain.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

Maintain a safe speed when driving down hill. Use service brake to control speed when traveling down an incline. A sudden stop or change of direction may result in loss of control.

To prevent loss of control, do not move the direction selector of a PDS vehicle while the vehicle is in motion. Moving the selector will result in a sudden slowing of the vehicle and the beeping of a warning device.

Slow down before and during turns. All turns should be made at reduced speed.

Never drive vehicle up, down, or across an incline that exceeds 14° (25% grade).

## WARNING

To reduce the possibility of severe injury or death resulting from improper vehicle operation, the following warnings must be observed:

Refer to GENERAL SPECIFICATIONS for seating capacity.

Depressing accelerator pedal will release foot operated park brake and may cause inadvertent vehicle movement. Turn the key to the 'OFF' position whenever the vehicle is parked.

To prevent inadvertent movement when the vehicle is to be left unattended, engage the park brake, move direction selector to forward position, turn key to 'OFF' position and remove key.

Make sure that the direction selector is in correct position before attempting to start the vehicle.

Always bring the vehicle to a complete stop before shifting the direction selector.

Do not take vehicle out of 'gear' while in motion (coast).

Check the area behind the vehicle before operating in reverse.

All occupants must be seated. Keep entire body inside vehicle and hold on while vehicle is in motion.

## PRECISION DRIVE SYSTEM™

Precision Drive System™ (PDS) vehicles are operated in one of four modes or "performance options". All options have standard features that control, protect and diagnose the vehicle.

### NOTE

PDS vehicles operate only when the Run - Tow/Maintenance switch is in the 'RUN' position. See 'RUN - TOW/MAINTENANCE SWITCH (PDS VEHICLES ONLY)' on page 3.

## Performance Options

The options are defined as follows:

Performance Option	Top Speed	Pedal-Up Braking Strength
1. All Terrain	13-13.5 mph (21-22 kmph)	None
2. Steep Hill	13-13.5 mph (21-22 kmph)	Heavy
3. Mild Hill	14-14.5 mph (22.5-23 kmph)	Mild
4. Freedom	17-19 mph (27-30.5 kmph)	None

Fig. 9 Performance Options

1. The All-Terrain performance option: The vehicle's top speed is sensed and regulated directly by the controller.
2. The Steep Hill performance option: This option includes all of the driving features and top speed of All-Terrain plus pedal-up braking. This is the strongest of the two pedal-up braking options.
3. The Mild Hill performance option: This option includes all of the driving features of the Steep Hill option, except the pedal-up braking feel is milder and the top speed is slightly higher.
4. The Freedom performance option: This option includes all of the driving features of the All-Terrain option except that the vehicle's top speed is the highest available. This option is not offered on fleet golf cars.

### NOTE

The Freedom option is not available for fleet golf cars.

The vehicle performance option can be determined by placing the vehicle in diagnostic mode. See Technician's Repair and Service Manual. The number of beeps heard immediately after entering diagnostic mode corresponds to the above option numbers.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## Regenerative Braking

### **WARNING**

To prevent the possibility of loss of control that could cause severe injury or death, use service brake to control speed. The PDS system is not a substitute for the service brake.

PDS models are equipped with a regenerative motor control system.

Example: If all of the following events occur...

- a) the vehicle is being driven down a slope
- b) the vehicle attempts to exceed the specified top speed with the accelerator pedal depressed or released

the regenerative braking will limit the speed of the vehicle to the specified top speed (the warning beeper will **not** sound). When the regenerative braking system is activated by this sequence of events, the motor generates power which is returned to the batteries.

If the operator attempts to override the regenerative braking feature by moving the direction selector or key switch to another position, the warning beeper will sound and the vehicle will brake **rapidly** until it reaches the speed of approximately 2 mph (3 kph).

## Pedal-Up Braking

Pedal-up braking is regenerative braking that occurs when the accelerator pedal is released while the vehicle is moving between 8 mph (13 kph) and the vehicle's top speed.

Example: If all of the following events occur...

- a) the vehicle is being driven down a slope
- b) the accelerator pedal is released for more than one second

the pedal-up braking will slow the vehicle (the warning beeper will **not** sound) until either the vehicle speed is reduced to 8 mph (13 kph), at which it freely coasts between 8 and 3 mph (5 kph), or the accelerator pedal is applied. When pedal-up braking system is activated by this sequence of events, the motor generates power which is returned to the batteries.

## Walk-Away Feature

Walk-Away limits vehicle movement without driver input, slowing the vehicle to 2 mph (3 kph) and sounding an audible alarm (reverse beeper).

Example: If all of the following events occur...

- a) the vehicle has been stopped for more than 1.5 seconds
- b) the accelerator pedal has been released for more than one second
- c) the vehicle begins to roll above 2 mph (3 kph)

the electronic braking will limit speed to approximately 2 mph (3 kph) and the warning beeper will sound. When the accelerator pedal is depressed, the electronic braking and warning beeper will be overridden and normal vehicle operation resumes. Any unusual situation sensed by the PDS system will cause a similar response. The system functions in all key switch positions.

## Anti-Roll Back Feature

Anti-Roll Back, like Walk-Away, limits backward motion of the vehicle down an incline to less than 2 mph (3 kph). See 'Walk-Away Feature' above.

## Anti-Stall Feature

Anti-Stall protection prevents motor damage from stalling the vehicle against an object or on a hill.

Example: If all of the following events occur...

- a) the system senses that the accelerator pedal is depressed (power applied to motor)
- b) the motor is stalled long enough that any more time may cause motor damage

the PDS system will momentarily interrupt power to the motor. This brief interruption will permit the car to roll backwards slightly before again stopping in the stalled condition. This process will repeat itself periodically until the car is moved from the stalled condition.

Example: If all of the following events occur...

- a) the system senses that the accelerator pedal is depressed (power applied to motor)
- b) the brake is engaged so as to prevent vehicle motion

the PDS system will sense a stalled motor condition and remove power from the motor. When the brake pedal is released, the car will roll backwards slightly before power is returned to the motor.

## High Pedal Disable Feature

High pedal disable prevents undesired acceleration if the direction selector lever is changed, or the key is turned on while the accelerator is depressed.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## Diagnostic Mode Feature

Diagnostic mode eases troubleshooting.

In the unlikely event of certain electrical system failures, the PDS controller will default to a mode that will permit the vehicle to operate, but at a very reduced speed.

This feature allows the vehicle to be driven back to its storage facility where the problem can be diagnosed.

The controller can be put in diagnostic mode by the technician and the controller will report the failure mode.

## STARTING AND DRIVING

### WARNING

*To reduce the possibility of roll-back which could result in severe injury or vehicle damage, do not release the service brake until motor has started.*

All vehicles are equipped with an interlock system that disables the controller and prevents the vehicle from being operated while the charger is connected. The interlock functions even if the DC plug is not fully connected in the vehicle receptacle. Remove charger plug from vehicle receptacle and properly store cable prior to moving vehicle.

To operate vehicle:

- Apply the service brake, place the key in the key switch and turn it to the 'ON' position.
- Move the direction selector to the direction desired.
- Release the park brake by depressing the service brake pedal until the park brake releases.
- Slowly depress the accelerator pedal to start the motor. Release service brake when motor starts.
- When the accelerator pedal is released, the motor stops. To stop the vehicle more quickly, depress the **service brake pedal**.

### NOTE

*When the direction selector is in the reverse position, a warning signal will sound to indicate that the vehicle is ready to run in reverse.*

## STARTING VEHICLE ON A HILL (Non PDS Vehicle)

### WARNING

*To reduce the possibility of roll-back which could result in severe injury or vehicle damage, do not release the service brake until motor has started.*



### CAUTION

*Do not hold vehicle on hill by using accelerator and motor. Leaving motor in a stalled condition for more than 3 - 4 seconds will cause permanent damage to motor.*

To reduce the possibility of permanent damage to the drive system, it is important to prevent excessive roll-back when starting the vehicle on a hill.

Place left foot on service brake and release the park brake. Depress accelerator with right foot and release the service brake by lifting left foot.

## COASTING



### WARNING

*To reduce the possibility of severe injury or death from coasting at above recommended speeds, limit speed with service brake.*

Uncontrolled coasting does not occur with PDS model vehicles because the PDS controls the top speed of the vehicle while moving down hill. However, the PDS is not a substitute for the service brake which should be used to control the speed of the vehicle.

### NOTE

*Some PDS models are equipped with a feature (pedal-up braking) which slows the vehicle's speed when the accelerator pedal is released.*

On steep hills, it is possible for non-PDS vehicles to coast at faster than normal speeds that may be encountered on a flat surface. To prevent loss of vehicle control, speeds should be limited to no more than the maximum speed on level ground (see vehicle specification). Limit speed by releasing the accelerator and applying service brake. Severe damage to the drive train components due to excessive speed may result from driving the vehicle above specified speed. Damage caused by excessive speed may cause a loss of control, is costly, is considered abuse and will not be covered under warranty.

## LABELS AND PICTOGRAMS

Vehicles may be labeled with pictograms as a method of conveying information or warnings. Appendix A illustrates and explains pictograms that may appear on the vehicle. Not all pictograms shown in Appendix A will be found on your vehicle.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## SUN TOP AND WINDSHIELD

### **WARNING**

*The sun top does not provide protection from roll over or falling objects.*

*The windshield does not provide protection from tree limbs or flying objects.*

The sun top and windshield provide some protection from the elements; however, they will not keep the operator and passenger dry in a downpour. This vehicle is not equipped with seat belts and the sun top has not been designed to provide roll over protection. In addition, the sun top does not protect against falling objects nor does the windshield protect against flying objects and tree limbs. Keep arms and legs inside of vehicle while it is moving.

## VEHICLE CLEANING AND CARE

### VEHICLE CLEANING

### **WARNING**

*To reduce the possibility of severe injury or vehicle damage, read and understand all instructions supplied by manufacturer of pressure washer.*

### **CAUTION**

*When pressure washing exterior of vehicle, do not use pressure in excess of 700 psi. To reduce the possibility of cosmetic damage, do not use any abrasive or reactive solvents to clean plastic parts.*

It is important that proper techniques and cleaning materials be used. Using excessive water pressure may cause severe injury to operator or bystander, damage to seals, plastics, seat material, body finish or electrical system. Do not use pressure in excess of 700 psi to wash exterior of vehicle.

Clean windshield with lots of water and a clean cloth. Minor scratches may be removed using a commercial plastic polish or Plexus® plastic cleaner available from the service parts department.

Normal cleaning of vinyl seats and plastic or rubber trim requires the use of a mild soap solution applied with a sponge or soft brush and wipe with a damp cloth.

Removal of oil, tar, asphalt, shoe polish, etc. will require the use of a commercially available vinyl/rubber cleaner.

The painted surfaces of the vehicle provide attractive appearance and durable protection. Frequent washing with lukewarm or cold water and mild detergent is required to preserve the painted surfaces.

Occasional cleaning and waxing with non-abrasive products designed for 'clear coat' automotive finishes will enhance the appearance and durability of the painted surfaces.

Corrosive materials used as fertilizers or for dust control can collect on the underbody of the vehicle. These materials will cause corrosion of underbody parts unless flushed occasionally with plain water. Thoroughly clean any areas where mud or other debris can collect. Sediment packed in closed areas should be loosened to ease its removal, taking care not to chip or otherwise damage paint.

## REPAIR

### LIFTING THE VEHICLE

Tool List	Qty. Required
Floor jack .....	1
Jack stands.....	4
Chocks.....	4

Some servicing operations may require the front wheels, the rear wheels, or the entire vehicle be raised.

### **WARNING**

*To reduce the possibility of severe injury or death from a vehicle falling from a jack:*

*Be sure the vehicle is on a firm and level surface.*

*Never get under a vehicle while it is supported by a jack.*

*Use jack stands and test the stability of the vehicle on the stands.*

*Always place chocks in front and behind the wheels not being raised.*

*Use extreme care since the vehicle is extremely unstable during the lifting process.*

### **CAUTION**

*When lifting vehicle, position jacks and jack stands at the areas indicated only.*

To raise the entire vehicle, install chocks in front and behind each front wheel (Ref Fig. 10 on page 9). Center the jack under the rear frame crossmember. Raise the vehicle enough to place a jack stand under the outer ends of the rear axle.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings


Lower the jack and test the stability of the vehicle on the two jack stands.

Place the jack at the center of the front axle. Raise the vehicle enough to place jack stands under the frame crossmember as indicated.

Lower the jack and test the stability of the vehicle on all four jack stands.

If only the front or rear of the vehicle is to be raised, place the chocks in front and behind each wheel not being raised to stabilize the vehicle.

Lower the vehicle by reversing the lifting sequence.

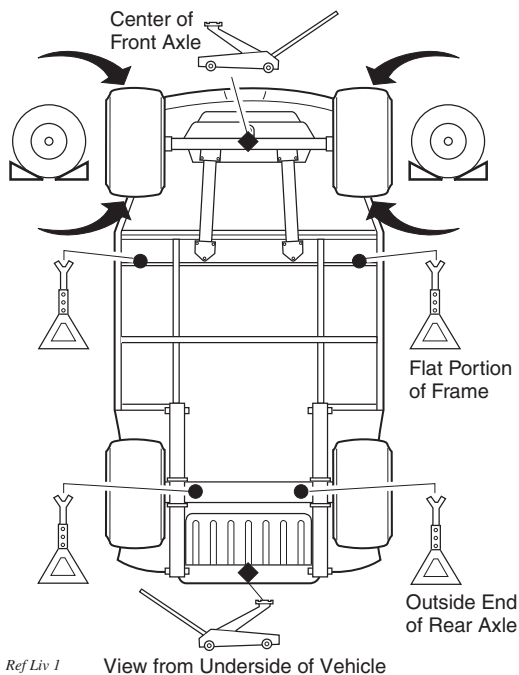

**Fig. 10 Lifting the Vehicle**

## WHEELS AND TIRES

### Tire Repair

Tool List	Qty. Required
Lug wrench, 3/4" .....	1
Impact socket, 3/4", 1/2" drive.....	1
Impact wrench, 1/2" drive.....	1
Torque wrench, 1/2" drive .....	1

**WARNING**  
*A tire explosion can cause severe injury or death. Never exceed inflation pressure rating on tire sidewall.*

*To reduce the possibility of tire explosion, pressurize tire with small amount of air applied intermittently to seat beads. Due to the low volume of the small tires, overinflation can occur in seconds. Never exceed the tire manufacturer's recommendation when seating a bead. Protect face and eyes from escaping air when removing valve core.*

*To reduce the possibility of severe injury caused by a broken socket when removing wheels, use only sockets designed for impact wrench use.*

*Use caution when inflating tires. Overinflation could cause the tire to separate from the wheel or cause the tire to explode, either of which could cause severe injury.*

Use caution when inflating tires. Due to the low volume of the small tires, overinflation can occur in seconds. Overinflation could cause the tire to separate from the wheel or cause the tire to explode.

Tire inflation should be determined by the condition of the terrain. See GENERAL SPECIFICATIONS section for recommended tire inflation pressure. For outdoor applications with major use on grassy areas, the following should be considered. On hard turf, it is desirable to have a **slightly** higher inflation pressure. On very soft turf, a lower pressure reduces the possibility of tires cutting into the turf. For vehicles being used on paved or hard surfaces, tire inflation pressure should be in the higher allowable range, but under no condition should inflation pressure be higher than recommended on tire sidewall. **All four tires** should have the same pressure for optimum handling characteristics. Be sure to install the valve dust cap after checking or inflating.

The vehicle is fitted with low pressure tubeless tires mounted on one piece rims; therefore, the most cost effective way to repair a puncture in the tread is to use a commercial tire plug.

**NOTE**  
*Tire plug tools and plugs are available at most automotive parts outlets and have the advantage of not requiring the tire be removed from the wheel.*

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

If the tire is flat, remove the wheel and inflate the tire to the maximum recommended pressure for the tire. Immerse the tire in water to locate the leak and mark with chalk. Insert tire plug in accordance with manufacturer's instructions.

## ⚠ WARNING

To reduce the possibility of severe injury, be sure mounting/demounting machine is anchored to floor. Wear OSHA approved safety equipment when mounting/demounting tires.

If the tire is to be removed or mounted, the tire changing machine manufacturer's recommendations must be followed in order to reduce possibility of severe injury.

### Wheel Installation


## ⚠ CAUTION

To reduce the possibility of component damage, do not tighten lug nuts to more than 85 ft. lbs. (115 Nm) torque.

## NOTE

It is important to follow the 'cross sequence' pattern when installing lug nuts. This will assure even seating of the wheel against the hub.

With the valve stem to the outside, mount the wheel onto the hub with lug nuts. Finger tighten lug nuts in a 'cross sequence' pattern (Ref Fig. 11 on page 10). Tighten lug nuts to 50 - 85 ft. lbs. (70 - 115 Nm) torque in 20 ft. lbs. (30 Nm) increments following the 'cross sequence' pattern.

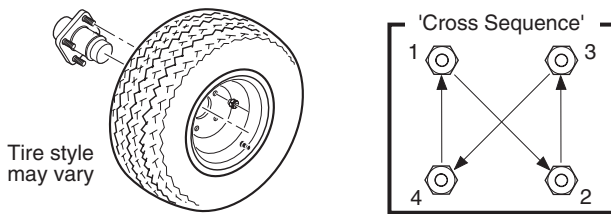

Ref Whi 1

Fig. 11 Wheel Installation

### LIGHT BULB REPLACEMENT


## ⚠ CAUTION

To reduce the possibility of premature bulb failure, do not touch new bulbs with bare fingers. Use clean, dry tissue or paper towel to handle the glass portion of the bulb.

For vehicles equipped with lights mounted below cowl, locate bulb socket on backside of light bar (Ref Fig. 12 on page 10) and turn bulb socket a quarter turn counter-clockwise to unlock and pull out bulb. Insert new bulb


(Ref. Capacities and Replacement Parts on page 17) and rotate socket a quarter turn clockwise to secure.

To replace the tail and brake light bulb, remove hardware securing lens and remove lens (Ref Fig. 13 on page 10). Install replacement bulb (Ref. Capacities and Replacement Parts on page 17).

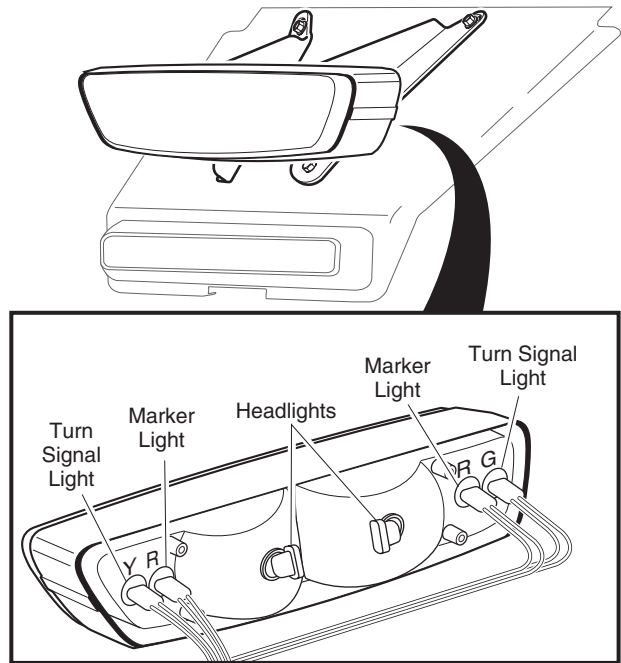

Ref Hdr 1

Fig. 12 Headlight, Turn Light and Marker Bulb Replacement

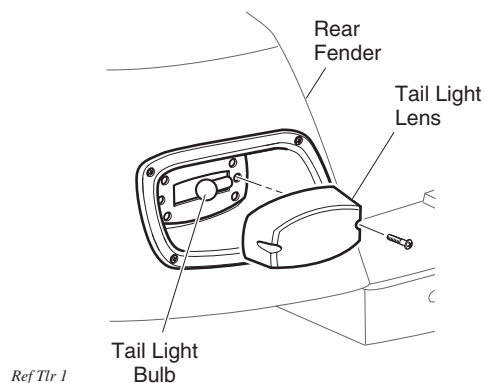

Ref Tlr 1

Fig. 13 Tail and Brake Light Bulb Replacement



# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## TRANSPORTING VEHICLE

### TOWING

#### **WARNING**

To reduce the possibility of severe injury or death:

*Use extra caution when towing a vehicle.*

*Do not ride on vehicle being towed.*

*Do not attempt to tow the vehicle with ropes, chains or any device other than a factory approved tow bar.*

*Do not tow vehicle on highways.*

*Do not tow a single vehicle at speeds in excess of 12 mph (19 kph).*

*Do not tow more than three vehicles at a time.*

*Do not exceed 5 mph (8 kph) while towing multiple vehicles.*

#### **CAUTION**

*For non-PDS vehicles, lock direction selector in neutral position prior to towing to prevent possible damage to electric motor.*

*For PDS vehicles, place Run-Tow/Maintenance switch in 'Tow/Maintenance' position prior to towing to prevent damage to electric motor and controller.*

*Do not tow a single vehicle at speeds in excess of 12 mph (19 kph). Do not tow more than three vehicles at a time. Do not exceed 5 mph (8 kph) while towing multiple vehicles. Towing the vehicle at above recommended speed may result in severe injury and/or damage to vehicle and other property.*

*Tow bars are not intended for road use.*

PDS model vehicles are equipped with a 'Run-Tow/Maintenance' switch located underneath the seat on the passenger side. The 'Tow/Maintenance' position allows the vehicle to roll freely without activating the warning beeper and eliminating potential damage to controller or motor (Ref Fig. 7 on page 4). Check to see that vehicles to be towed are switched to the 'Tow/Maintenance' position.

Never use ropes or chains to tow vehicle(s). Tow bars are available from the Service Parts Department.

Tow bars are not intended for highway use. Before towing, lock direction selector in neutral. Do not ride on vehicle being towed. Tow bars are designed to tow only one

vehicle at a maximum speed of 12 mph (19 kph) and up to three vehicles at a maximum speed of 5 mph (8 kph).

### HAULING

#### **WARNING**

To reduce the possibility of severe injury or death while transporting vehicle:

*Secure the vehicle and contents.*

*Never ride on vehicle being transported.*

*Always remove windshield before transporting.*

*Maximum speed with sun top installed is 50 mph (80 kph).*

If the vehicle is to be transported at highway speeds, the sun top must be removed and the seat bottom secured. When transporting vehicle below highway speeds, check for tightness of hardware and cracks in sun top at mounting points. Always remove windshield when transporting. Always check that the vehicle and contents are adequately secured before transporting. The rated capacity of the trailer or truck must exceed the weight of the vehicle (see GENERAL SPECIFICATIONS for vehicle weight) and load plus 1000 lbs. (454 kg). Lock the park brake and secure the vehicle using ratchet tie downs.

## SERVICE AND MAINTENANCE

#### **WARNING**

To reduce the possibility of severe injury or death from improper servicing techniques:

*Do not attempt any type of servicing operations before reading and understanding all notes, cautions and warnings in this manual.*

*Any servicing requiring adjustments to be made to the powertrain while the motor is running must be made with both drive wheels raised and vehicle properly supported on jack stands.*

*To reduce the possibility of motor damage, never operate vehicle at full throttle for more than 4 - 5 seconds while vehicle is in a 'no load' condition.*


# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings



*Wear eye protection when working on the vehicle. Use extra care when working around batteries, or using solvents or compressed air.*

*To reduce the possibility of causing an electrical arc, which could result in a battery explosion, turn off all electrical loads from the battery before removing battery wires.*



*Wrap wrenches with vinyl tape to reduce the possibility of a dropped wrench 'shorting out' a battery, which could result in an explosion.*

*Reduce the possibility of accidental starting by removing and grounding spark plug wires and disconnecting battery at negative terminal before servicing.*

*The electrolyte in a battery is an acid solution which can cause severe burns to the skin and eyes. Treat all electrolyte spills to the body and eyes with extended flushing with clear water. Contact a physician immediately.*

*Any electrolyte spills should be neutralized with a solution of 2 teaspoons (10 ml) sodium bicarbonate (baking soda) dissolved in 1 quart (1 liters) of water and flushed with water.*

*Aerosol containers of battery terminal protectant must be used with extreme care. Insulate metal container to reduce the possibility of can contacting battery terminals which could result in an explosion.*

It is in the best interest of both vehicle owner and service technician, to carefully follow the procedures recommended in this manual. Preventative maintenance, applied at recommended intervals, is the best guarantee for keeping the vehicle both dependable and economical.



## CAUTION

*Before any electrical service is performed, the 'Run-Tow/Maintenance' switch must be placed in the 'Tow/Maintenance' position.*

*If a power wire (battery, motor or controller) is disconnected for any reason, the 'Run-Tow/Maintenance' switch must be left in the 'Tow/Maintenance' position for at least 30 seconds after the circuit is restored.*



## CAUTION

*To prolong vehicle life, some maintenance items must be serviced more frequently on vehicles used under severe driving conditions such as extreme temperatures, extreme dust/debris conditions, frequent use with maximum load.*

To access powertrain for routine maintenance, lift or remove seat. For major repair, refer to appropriate Technician's Repair and Service Manual.

Some service procedures may require the vehicle to be lifted. Refer to LIFTING THE VEHICLE for proper lifting procedure and safety information.


# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## SERIAL NUMBER PLATE & LOCATION

Two serial number and manufacture date code plates are on the vehicle. One is placed on the body below the front, driver side of the seat. The other is located on the chassis between the seat back supports. To access it, raise the seat and lift up the flap on the access panel (Ref Fig. 14 on page 13).

Design changes take place on an ongoing basis. In order to obtain correct components for the vehicle, the manufacture date code, serial number and vehicle model must be provided when ordering service parts.

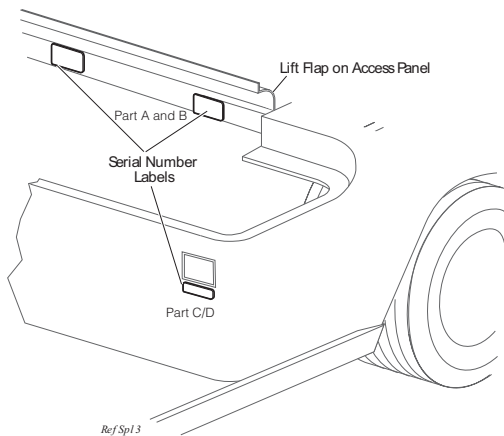

PART A			Augusta Georgia, USA	
			1 800 241-5855	
	MODEL <input type="text"/>			
	DATE CODE <input type="text"/>			
	SERIAL No. <input type="text"/>			
	Bar Code <input type="text"/>		Lb / kg W Batt Nom Power Hp / kw Label No.	
PART B	Rated Capacity W/Operator lb/kg /		System voltage V	
	Lb/kg W/O Batt /		Max Batt lb/kg /	Max Draw bar lb/kg /
	<input type="text"/>			
	<input type="text"/>			
PART C/D	SERIAL No. <input type="text"/>			
	Bar Code <input type="text"/>			

Fig. 14 Serial Number Plate & Location

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## PERIODIC SERVICE SCHEDULE

✓ Check    ♦ Clean, Adjust, etc.    ▲ Replace <b>To perform service that is listed in this schedule but not described in this manual, contact a local Service Representative or see the Repair and Service Manual for this vehicle.</b> <b>NOTE:</b> Some maintenance items must be serviced more frequently on vehicles used under severe driving conditions	
<b>DAILY</b>	
	BEFORE USE: ✓ Check service brake general operation ✓ Check park brake function ✓ Check warning device function in reverse ✓ Check tire condition ✓ Check overall vehicle condition ♦ Recharge batteries to full state of charge after each day's use ✓ Inspect charger connector and receptacle at each charge
<b>WEEKLY</b>	
TIRES	✓ Examine for cuts, excessive wear and pressure (See GENERAL SPECIFICATIONS)
WHEELS	✓ Check for bent rims, missing or loose lug nuts
<b>MONTHLY - 20 HOURS (includes items listed in previous table &amp; the following)</b>	
BATTERIES	♦ Clean batteries & terminals. See BATTERY CLEANING. ✓ Check charge condition and all connections ✓ Check battery water
WIRING	✓ Check all wiring for loose connections and broken/missing insulation
CHARGER / RECEPTACLE	♦ Clean connections, keep receptacles free of dirt and foreign matter
ACCELERATOR	✓ Check for smooth movement
SERVICE BRAKE (MECHANICAL BRAKES)	✓ Conduct brake performance test
PARK BRAKE	✓ Check brake performance and adjust if required
DIRECTION SELECTOR	✓ Check attachment, tighten if required
STEERING ASSEMBLY	✓ Check for abnormal play, tightness of all hardware
TIE ROD/LINKAGES	✓ Check for excessive play, bent components or loose connections
PDS SYSTEM	✓ Check for PDS Controller braking force (see PDS MODEL VEHICLES in text) proper operation of system
REAR AXLE	✓ Check for leakage, add SAE 30 oil as required
<b>QUARTERLY - 50 HOURS (includes items listed in previous tables &amp; the following)</b>	
FRONT AXLE	✓ Check for damage to axle and loose or missing hardware
FRONT SHOCK ABSORBERS	✓ Check for oil leakage and loose fasteners
FRONT SPRINGS	✓ Check for loose hardware, cracks at attachments

**Fig. 15 Periodic Service Schedule**

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

FRONT WHEEL ALIGNMENT	✓ Check for unusual tire wear, align if required
PARK BRAKE	✓ Check for bent/binding linkage rod ✓ Check for damage or wear to latch arm or catch bracket ♦ Lubricate as required, use light oil. DO NOT LUBRICATE CABLES OR BRAKE LATCH
REAR SHOCK ABSORBERS	✓ Check for oil leakage, loose mounting hardware
POWERWISE™ CHARGER PLUG	♦ Clean auxiliary contact (see BATTERY CHARGER MAINTENANCE)
HARDWARE AND FASTENERS	✓ Check for loose or missing hardware and components ♦ Tighten or replace missing hardware
<b>SEMI-ANNUAL - 125 HOURS (includes items listed in previous tables &amp; the following)</b>	
DIRECTION SELECTOR	✓ Check for wear and smooth movement (lubricate shaft with light oil if required)
KING PINS	✓ Check for excessive play and tightness of retaining nuts
STEERING ASSEMBLY	✓ Check bellows and pinion seal for damage or grease leakage
RACK END BALL JOINT	♦ Lubricate, use wheel bearing grease
REAR AXLE	✓ Check for unusual noise and loose or missing mounting hardware
<b>ANNUAL - 250-300 HOURS (includes items listed in previous tables &amp; the following)</b>	
FRONT WHEEL BEARINGS	✓ Check and adjust as required, see Technician's Repair and Service Manual
REAR AXLE	✓ Check lubricant, add lubricant (SAE 30 oil) as required
SERVICE BRAKES	♦ Clean and adjust, see Technician's Repair and Service Manual ✓ Check brake shoe linings, see Technician's Repair and Service Manual

Fig. 15 Periodic Service Schedule

## TIRE INSPECTION

Tire condition should be inspected per the Periodic Service Schedule (Ref. Fig. 15 on page 14). Inflation pressures should be checked when the tires are cool. Be sure to install the valve dust cap after checking or inflating.

## BRAKES

### WARNING

*To reduce the possibility of severe injury or death, always evaluate pedal travel before operating a vehicle to verify some braking function is present.*

*All driving brake tests must be done in a safe location with regard for the safety of all personnel.*

### NOTE

*Over time, a subtle loss of performance may take place; therefore, it is important to establish the standard with a new vehicle.*

The Periodic Brake Performance Test should be performed regularly (Ref. Fig. 15 on page 14) as an evalua-

tion of braking system performance. It is useful as a method of identifying subtle loss of performance over time.

## Periodic Brake Test for Mechanical Brakes

The purpose of this test is to compare the braking performance of the vehicle to the braking performance of new or 'known to be good' vehicles or to an established acceptable stopping distance. Actual stopping distances will be influenced by weather conditions, terrain, road surface condition, actual vehicle weight (accessories installed) and vehicle speed. No specific braking distance can be reliably specified. The test is conducted by latching the parking brake to eliminate different pedal pressures and to include the affects of linkage mis-adjustment.

Establish the acceptable stopping distance by testing a new or 'known to be good' vehicle and recording the stopping location or stopping distance. For fleets of vehicles, several vehicles should be tested when new and the range of stopping locations or distances recorded.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings


Drive the vehicle at maximum speed on a flat, dry, clean, paved surface (Ref. Fig. 16 on page 16). Quickly depress

within the 'normal' range of stopping distances. If the vehicle stops more than 4 ft. (1.2 m) beyond the acceptable stopping distance or pulls to one side, the vehicle has failed the test and should be tested again.

If the vehicle fails the second test, it should **immediately** be removed from service. The vehicle **must** be inspected by a qualified mechanic who should refer to the TROUBLESHOOTING section in the Technician's Repair and Service Manual.


## REAR AXLE

The only maintenance required for the first five years is the periodic inspection of the lubricant level. The rear axle is provided with a lubricant level check/fill plug located on the bottom of the differential (Ref Fig. 17 on page 16). Unless leakage is evident, the lubricant need only be replaced after five years.

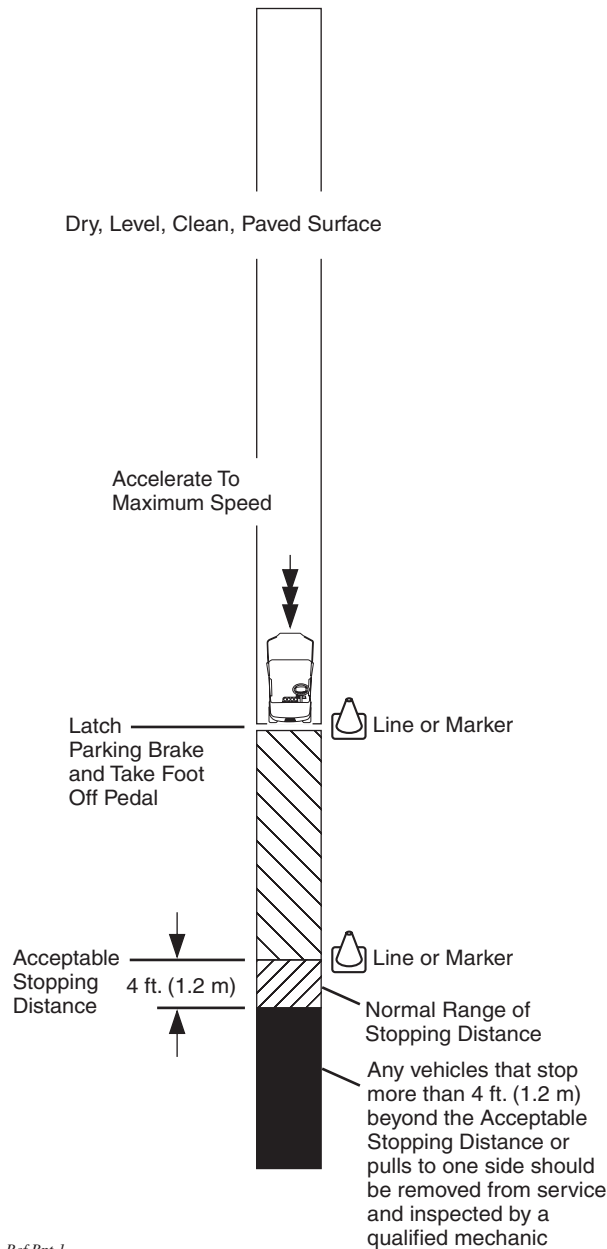

**Fig. 16 Typical Brake Performance Test**

the brake pedal to latch the parking brake at the line or marker in the test area and remove foot from pedal. The vehicle should stop aggressively. The wheel brakes may or may not lock. Observe the vehicle stopping location or measure the vehicle stopping distance from the point at which the brakes were latched. The vehicle should stop

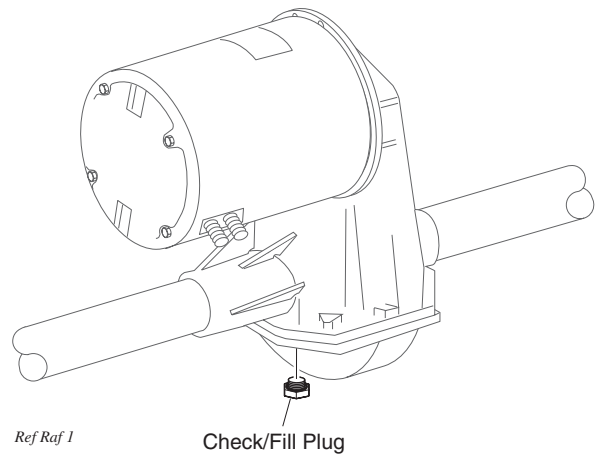

**Fig. 17 Add, Check and Drain Axle Lubricant - Late Production**

## Checking the Lubricant Level

Clean the area around the check/fill plug and remove plug. The correct lubricant level is just below the bottom of the threaded hole. If lubricant is low, add lubricant as required. Add lubricant slowly until lubricant starts to seep from the hole. Install the check/fill plug. In the event that the lubricant is to be replaced, the vehicle must be elevated and the oil pan removed or the oil siphoned through the check/fill hole (Ref Fig. 17 on page 16).

# OPERATION AND SERVICE INFORMATION


Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## LUBRICATION


### CAUTION

Do not use more than three (3) pumps of grease in any grease fitting at any one time. Excess grease may cause grease seals to fail or grease migration into areas that could damage components.

Putting more than three pumps of grease in a grease fitting could damage grease seals and cause premature bearing failure (Ref Fig. 18 on page 17) (Ref Fig. 19 on page 17).

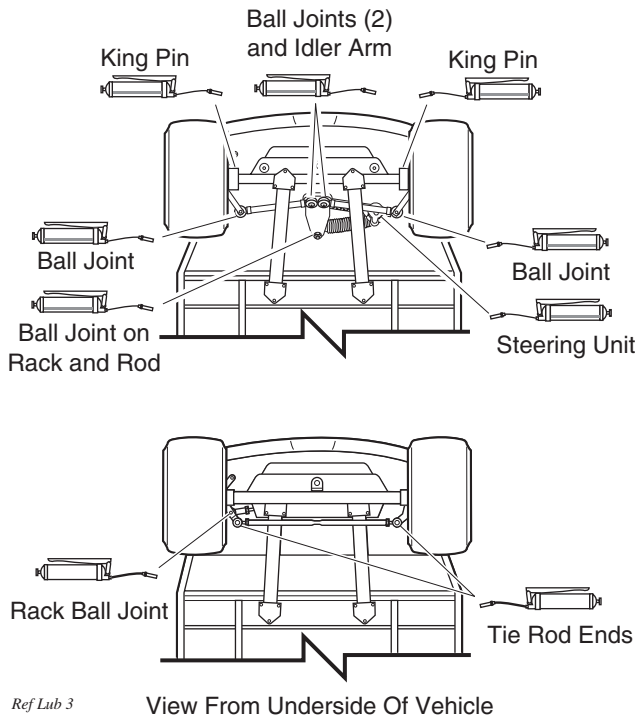

**Fig. 18 Lubrication Points - Early Production**

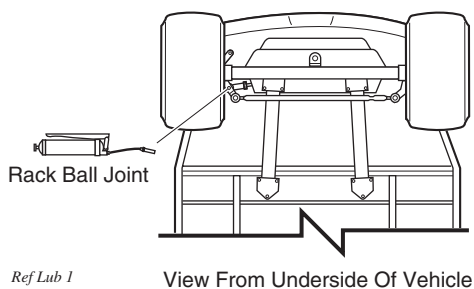

**Fig. 19 Lubrication Points - Late Production**

## PDS SYSTEM TEST

At monthly intervals, test the PDS system by allowing the vehicle to roll down an incline with the accelerator pedal released. Braking force should be felt at approximately 2 mph (3 kph) indicating that the PDS system is functioning. If vehicle speed continues to rise, apply the service brake and have vehicle inspected by a trained mechanic.

## HARDWARE

Periodically, the vehicle should be inspected for loose fasteners. Fasteners should be tightened in accordance with the Torque Specifications table (Ref Fig. 21 on page 18).

Use care when tightening fasteners and refer to the Technician's Repair and Service Manual for specific torque values.

Generally, three grades of hardware are used in the vehicle. Grade 5 hardware can be identified by the three marks on the hexagonal head and grade 8 hardware is identified by 6 marks on the head. Unmarked hardware is Grade 2 (Ref Fig. 21 on page 18).

## CAPACITIES AND REPLACEMENT PARTS







Rear Axle Oil	40 oz (1.2 liters) / SAE 30
Fuse	15 amp (P/N 18392-G1)
Headlight Bulb	#894 (P/N 74004-G01)
Marker Bulb	#912 (P/N 74005-G01)
Turn Signal Bulb	#921 (P/N 74006-G01)
Tail Light Bulb	#1157 (P/N 21759-G1)

Ref Cap 1

**Fig. 20 Capacities and Replacement Parts**

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

ALL TORQUE FIGURES ARE IN FT. LBS. (Nm)										
Unless otherwise noted in text, tighten all hardware in accordance with this chart.										
This chart specifies 'lubricated' torque figures. Fasteners that are plated or lubricated when installed are considered 'wet' and require approximately 80% of the torque required for 'dry' fasteners.										
BOLT SIZE	1/4"	5/16"	3/8"	7/16"	1/2"	9/16"	5/8"	3/4"	7/8"	1"
Grade 2 	4 (5)	8 (11)	15 (20)	24 (33)	35 (47)	55 (75)	75 (102)	130 (176)	125 (169)	190 (258)
Grade 5 	6 (8)	13 (18)	23 (31)	35 (47)	55 (75)	80 (108)	110 (149)	200 (271)	320 (434)	480 (651)
Grade 8 	6 (8)	18 (24)	35 (47)	55 (75)	80 (108)	110 (149)	170 (230)	280 (380)	460 (624)	680 (922)
BOLT SIZE	M4	M5	M6	M8	M10	M12	M14			
Class 5.8 (Grade 2) 	1 (2)	2 (3)	4 (6)	10 (14)	20 (27)	35 (47)	55 (76.4)			
Class 8.8 (Grade 5) 	2 (3)	4 (6)	7 (10)	18 (24)	35 (47)	61 (83)	97 (131)			
Class 10.9 (Grade 8) 	3 (4)	6 (8)	10 (14)	25 (34)	49 (66)	86 (117)	136 (184)			

Ref Tsp 1

Fig. 21 Torque Specifications and Bolt Grades

## BATTERIES AND CHARGING

### SAFETY

#### NOTE

Always observe the following warnings when working on or near batteries:

#### WARNING

To prevent battery explosion that could result in severe personal injury or death, keep all smoking materials, open flame or sparks away from the batteries.

Hydrogen gas is formed when charging batteries. Do not charge batteries without adequate ventilation. A 4% concentration of hydrogen gas is explosive.

Be sure that the key switch is off and all electrical accessories are turned off before starting work on vehicle.

Never disconnect a circuit under load at a battery terminal.



Batteries are heavy. Use proper lifting techniques when moving them. Always lift the battery with a commercially available battery lifting device. Do not tip batteries when removing or installing them; spilled electrolyte can cause burns and damage.

The electrolyte in a storage battery is an acid solution which can cause severe burns to the skin and eyes. Treat all electrolyte spills to the body and eyes with extended flushing with clear water. Contact a physician immediately.



Always wear a safety shield or approved safety goggles when adding water or charging batteries.

Any electrolyte spills should be neutralized with a solution of 1/4 cup (60 ml) sodium bicarbonate (baking soda) dissolved in 1 1/2 gallons (6 liters) of water and flushed with water.



# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

Overfilling batteries may result in electrolyte being expelled from the battery during the charge cycle. Expelled electrolyte may cause damage to the vehicle and storage facility.

Aerosol containers of battery terminal protectant must be used with extreme care. Insulate metal container to prevent can from contacting battery terminals which could result in an explosion.



Wrap wrenches with vinyl tape to prevent the possibility of a dropped wrench from

'shorting out' a battery, which could result in an explosion and severe personal injury or death.

## BATTERY

A battery is defined as two dissimilar metals immersed in an acid. If the acid is absent or if the metals are not dissimilar, a battery has not been created. The batteries most commonly used in these vehicles are lead acid.

A battery does not store electricity, but is able to produce electricity as the result of a chemical reaction which releases stored chemical energy in the form of electrical energy. The chemical reaction takes place faster in warm conditions and slower in cold conditions. Temperature is important when conducting tests on a battery and test results must be corrected to compensate for temperature differences.

As a battery ages, it still performs adequately except that its **capacity** is diminished. Capacity describes the time that a battery can continue to provide its design amperes from a full charge.

A battery has a maximum life, therefore good maintenance is designed to maximize the **available** life and reduce the factors that can reduce the life of the battery.

## BATTERY MAINTENANCE

Tool List	Qty. Required
Insulated wrench, 9/16".....	1
Battery carrier .....	1
Hydrometer .....	1
Battery maintenance kit P/N 25587-G01 .....	1
Battery Protective Spray .....	1

## At Each Charging Cycle

### **WARNING**

To reduce the possibility of fire, never attach a battery charger to a vehicle that is to be unattended beyond the normal charging cycle. Overcharging could cause damage to the vehicle batteries and result in extreme overheating. The charger should be checked after 24 hours and unplugged after the charge cycle is complete.

Before charging the batteries, inspect the plug of the battery charger and vehicle receptacle housing for dirt or debris.

Charge the batteries after each days use.

## Monthly

- Inspect all wiring for fraying, loose terminations, corrosion or deterioration of insulation.
- Check that the electrolyte level is correct and add suitable water as required.
- Clean the batteries and wire terminations.

## Electrolyte Level and Water

The correct level of the electrolyte is 1/2" (13 mm) above the plates in each cell (Ref Fig. 22 on page 19).

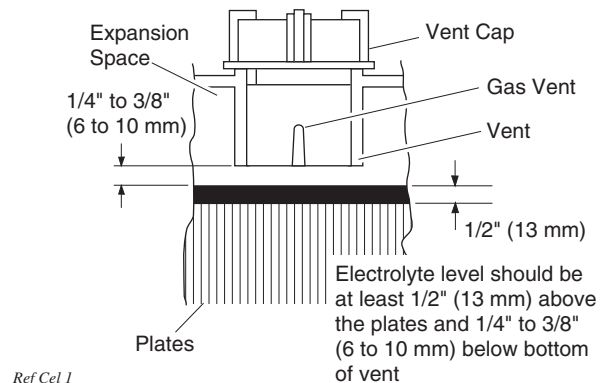


Fig. 22 Correct Electrolyte Level

This level will leave approximately 1/4" - 3/8" (6 - 10 mm) of space between the electrolyte and the vent tube. The electrolyte level is important since **any portion** of the plates exposed to air will be ruined beyond repair. Of equal importance is too much water which will result in electrolyte being forced out of the battery due to gassing and the increase in volume of the electrolyte that results from the charging cycle.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings



## CAUTION

Do not overfill batteries. The charging cycle will expel electrolyte and result in component damage.

A battery being charged will 'gas' with the majority of the gassing taking place at the end of the charging cycle. This gas is hydrogen which is lighter than air. Water and sulfuric acid droplets will be carried out of the battery vents by the hydrogen gas; however, this loss is minimal. If the battery electrolyte level is too high, the electrolyte will block the vent tube and the gas will **force** it out of the vent tube and battery cap. The water will evaporate but the sulfuric acid will remain where it can damage vehicle components and the storage facility floor. Sulfuric acid loss will weaken the concentration of acid within the electrolyte and reduce the life of the battery.

Over the life of the battery, a considerable amount of water is consumed. It is important that the water used be pure and free of contaminants that could reduce the life of the battery by reducing the chemical reaction. The water must be distilled or purified by an efficient filtration system. Water that is not distilled should be analyzed and if required, filtration installed to permit the water to meet the requirements of the water purity table (Ref Fig. 23 on page 20).

Impurity	Parts Per Million
Color.....	Clear
Suspended.....	Trace
Total Solids.....	100
Calcium & Magnesium Oxides.....	40
Iron.....	5
Ammonia.....	8
Organic & Volatile Matter.....	50
Nitrites.....	5
Nitrates.....	10
Chloride.....	5

Fig. 23 Water Purity Table

Even if the water is colorless, odorless, tasteless and fit for drinking, the water should be analyzed to see that it does not exceed the impurity levels specified in the table.

Automatic watering devices such as the one included in the Battery Maintenance Kit (P/N 25587-G01) can be used with an approved water source (Ref Fig. 24 on page 20). These watering devices are **fast and accurate**

to use and maintain the correct electrolyte level within the battery cells.

## NOTE

The watering device should only be used if the electrolyte level is less than 1/2" (13 mm) above top of plates.

Watering gun similar to the type included in the Battery Maintenance Kit

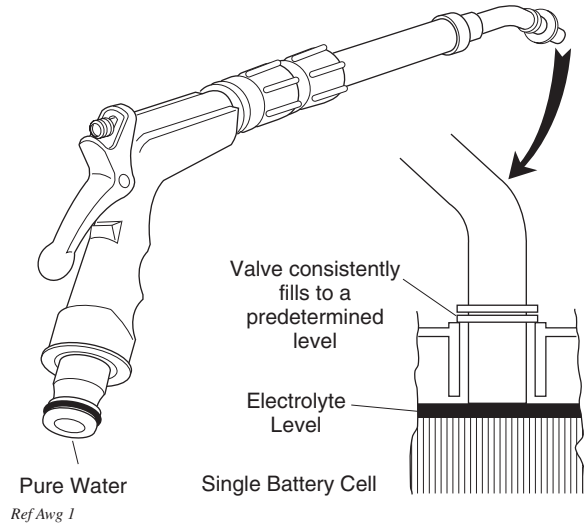


Fig. 24 Automatic Watering Gun  
Battery Cleaning



## CAUTION

To prevent battery damage, be sure that all battery caps (if equipped) are tightly installed.

To reduce the possibility of damage to vehicle or floor, neutralize acid before rinsing battery.

To reduce the possibility of damage to electrical components while cleaning, do not use a pressure washer.

Cleaning should take place per the Periodic Service Schedule (Ref. Fig. 15 on page 14).

When cleaning the outside of batteries and terminals, first spray with a solution of sodium bicarbonate (baking soda) and water to neutralize any acid deposits before rinsing with clear water.

Use of a water hose without first neutralizing any acid will move acid from the top of batteries to another area of the vehicle or storage facility where it will attack the metal structure or the concrete/asphalt floor. Additionally, conductive residue will remain on the batteries and contribute to their self discharge.




## WARNING

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

To reduce the possibility of battery explosion that could result in severe injury or death, do not use metallic spray wand to clean battery and keep all smoking materials, open flame or sparks away from the battery.

The correct cleaning technique is to spray the top and sides of the batteries with a solution of sodium bicarbonate (baking soda) and water. This solution is best applied with a garden type sprayer equipped with a **non metallic spray wand or plastic spray bottle**. The solution should consist of the ingredients shown in the illustration (Ref Fig. 25 on page 21). In addition, special attention should be paid to metal components adjacent to the batteries which should also be sprayed with the solution.

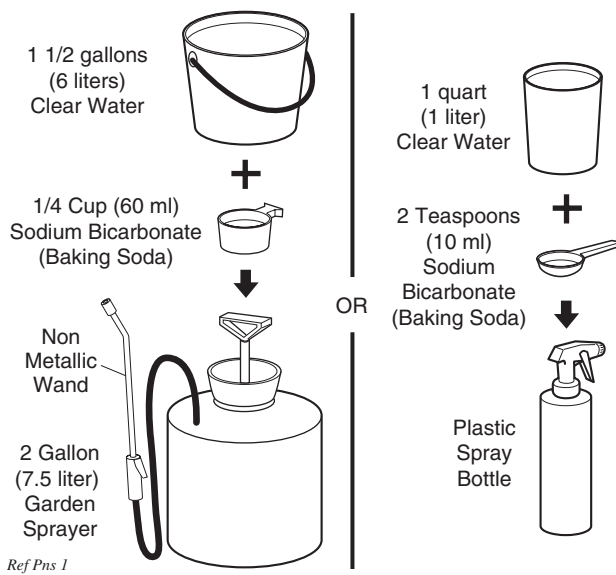

**Fig. 25 Preparing Acid Neutralizing Solution**

Allow the solution to sit for at least three minutes. Use a soft bristle brush or cloth to wipe the tops of the batteries to remove any conductive residue. Rinse the entire area with low pressure clear water. Do not use a pressure washer. All of the items required for complete battery cleaning and watering (electric vehicles only) are contained in the Battery Maintenance Kit (P/N 25587-G01).

## Battery Replacement

### **CAUTION**

Before any electrical service is performed on PDS model vehicles, the Run-Tow/Maintenance switch must be placed in the 'Tow/Maintenance' position.

If a power wire (battery, motor or controller) is disconnected for any reason on the PDS model vehicle, the Run-Tow/Maintenance switch must be left in the 'Tow/

Maintenance' position for at least 30 seconds after the circuit is restored.

Remove battery hold downs and cables. Lift out batteries with a commercially available lifting device.

If the batteries have been cleaned and any acid in the battery rack area neutralized as recommended, no corrosion to the battery racks or surrounding area should be present. Any corrosion found should be immediately removed with a putty knife and a wire brush. The area should be washed with a solution of sodium bicarbonate (baking soda) and water and thoroughly dried before priming and painting with a corrosion resistant paint.


The batteries should be placed into the battery racks and the battery hold downs tightened to 45 - 55 in. lbs. (5 - 6 Nm) torque, to prevent movement but not tight enough to cause distortion of the battery cases.

Inspect all wires and terminals. Clean any corrosion from the battery terminals or the wire terminals with a solution of sodium bicarbonate (baking soda) and brush clean if required.

### **WARNING**

To prevent battery explosion that could result in severe personal injury or death, extreme care must be used with aerosol containers of battery terminal protectant. Insulate the metal container to prevent the metal can from contacting battery terminals which could result in an explosion.

Use care to connect the battery wires as shown (Ref Fig. 26 on page 21). Tighten the battery post hardware to 90 - 100 in. lbs. (6 - 8 Nm) torque. Do not over-torque the terminal stud nut, this will cause a "mushroom" effect on the battery post which will prevent the terminal nut from being properly tightened.

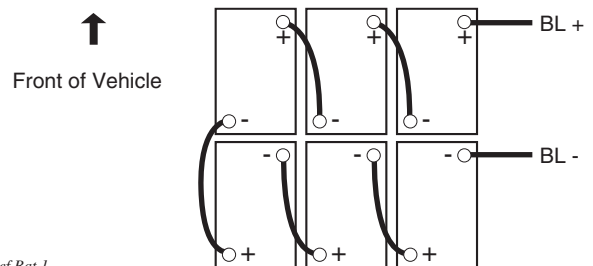

**Fig. 26 Battery Connections**

Protect the battery terminals and battery wire terminals with a commercially available coating.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## Prolonged Storage



### CAUTION

Battery charger, controller and other electronic devices need to be disconnected since they will contribute to the premature discharge of batteries.

During periods of storage, the batteries will need attention to keep them maintained and prevent discharge.

In high temperatures the chemical reaction is faster, while low temperatures cause the chemical reaction to slow down. A vehicle that is stored at 90 F (32 C) will lose .002 of specific gravity each day. If a fully charged battery has a specific gravity of 1.275, and the battery is allowed to sit unused, it will become partially discharged. When it reaches 1.240, which it will do in less than twenty days, it should be recharged. If a battery is left in a discharged state, sulfating takes place on and within the plates. This condition is not reversible and will cause permanent damage to the battery. In order to prevent damage, the battery should be recharged. A hydrometer can be used to determine the specific gravity and therefore the state of charge of a battery.

In winter conditions, the battery must be fully charged to prevent the possibility of freezing (Ref Fig. 27 on page 22). A fully charged battery will not freeze in temperatures above -75 F (-60 C). Although the chemical reaction is slowed in cold temperatures, the battery must be stored fully charged, and disconnected from any circuit that could discharge the battery. For PDS vehicles, the controller should be disconnected from the batteries by setting the Run-Tow/Maintenance switch, located under the passenger seat, to the 'TOW/MAINTENANCE' position. For portable chargers, disconnect the charging plug from the vehicle receptacle. For on-board chargers, disconnect the charging harness from the batteries. The batteries must be cleaned and all deposits neutralized and removed from the battery case to prevent self discharge. The batteries should be tested or recharged at thirty day minimum intervals.

## BATTERY CHARGING

The battery charger is designed to fully charge the battery set. If the batteries are severely deep cycled, some automatic battery chargers contain an electronic module that may not activate and the battery charger will not function. Automatic chargers will determine the correct duration of charge to the battery set and will shut off when the battery set is fully charged. Always refer to the instructions of the specific charger used.

Before charging, the following should be observed:



### CAUTION

Do not overfill batteries. The charging cycle will expel electrolyte and result in component damage.

- The electrolyte level in all cells must be at the recommended level and cover the plates.
- The charging must take place in an area that is well ventilated and capable of removing the hydrogen gas that is generated by the charging process. A **minimum** of five air exchanges per hour is recommended.
- The charging connector components are in good condition and free from dirt or debris.
- The charger connector is fully inserted into the vehicle receptacle.
- The charger connector/cord set is protected from damage and is located in an area to prevent injury that may result from personnel running over or tripping over the cord set.
- The charger is automatically turned off during the connect/disconnect cycle and therefore no electrical arc is generated at the DC plug/receptacle contacts.

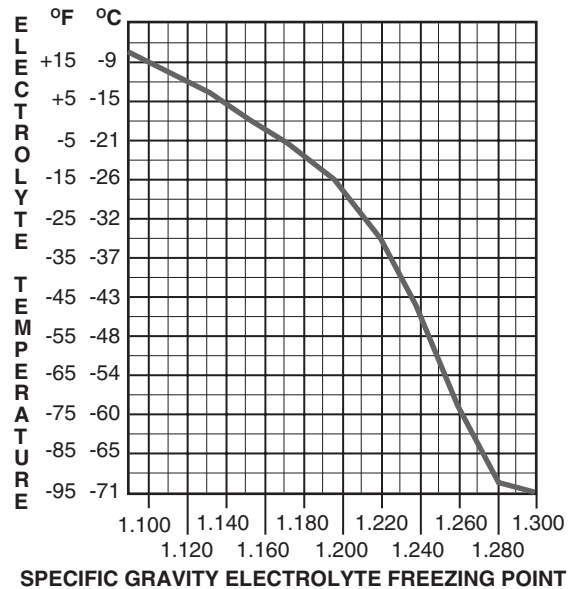


Fig. 27 Freezing Point of Electrolyte

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## NOTE

In some portable chargers, there will be a rattle present in the body of the charger DC plug. This rattle is caused by an internal magnet contained within the charger plug. The magnet is part of the interlock system that prevents the vehicle from being driven when the charger plug is inserted in the vehicle charging receptacle.

## AC Voltage

Battery charger output is directly related to the input voltage. If multiple vehicles are receiving an incomplete charge in a normally adequate time period, low AC voltage could be the cause and the power company should be consulted.

## TROUBLESHOOTING

In general, troubleshooting will be done for two distinct reasons. First, a battery that performs poorly and is outside of the manufacturer's specification should be identified in order to replace it under the terms of the manufacturer's warranty. Different manufacturers have different requirements. Consult the battery manufacturer or a manufacturer representative for specific requirements.

The second reason is to determine why a particular vehicle does not perform adequately. Performance problems may result in a vehicle that runs slowly or in a vehicle that is unable to operate for the time required.


A new battery must **mature** before it will develop its maximum capacity. Maturing may take up to 100 charge/discharge cycles. After the maturing phase, the older a battery gets, the lower the capacity. The only way to determine the capacity of a battery is to perform a load test using a discharge machine following manufacturer's recommendations.

A cost effective way to identify a poorly performing battery is to use a hydrometer to identify a battery in a set with a lower than normal specific gravity. Once the particular cell or cells that are the problem are identified, the suspect battery can be removed and replaced. At this point there is nothing that can be done to salvage the battery; however, the individual battery should be replaced with a good battery of the same brand, type and approximate age.

## Hydrometer

A hydrometer (P/N 50900-G1) is used to test the state of charge of a battery cell (Ref Fig. 28 on page 23). This is performed by measuring the density of the electrolyte,

which is accomplished by measuring the specific gravity of the electrolyte. The greater the concentration of sulfuric acid, the more dense the electrolyte becomes. The higher the density, the higher the state of charge.

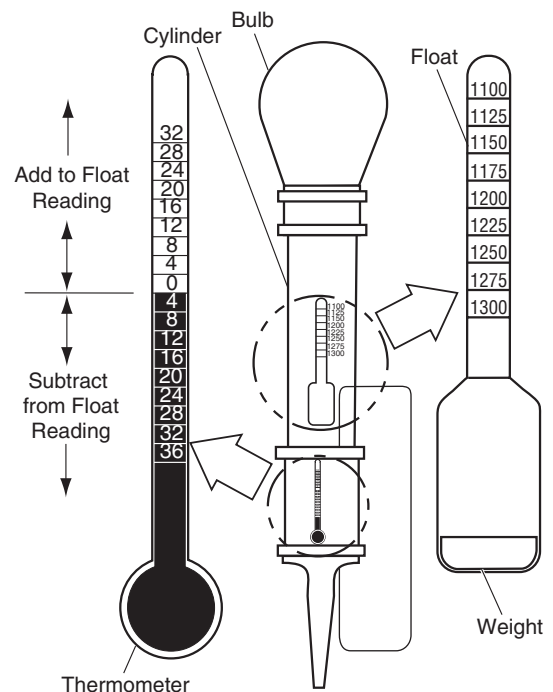

Ref Hyd 1

Fig. 28 Hydrometer

## WARNING

To prevent battery explosion that could result in severe personal injury or death, never insert a metal thermometer into a battery. Use a hydrometer with a built in thermometer that is designed for testing batteries.

Specific gravity is the measurement of a liquid that is compared to a baseline. The baseline is water which is assigned a base number of 1.000. The concentration of sulfuric acid to water in a new golf car battery is 1.280 which means that the electrolyte weighs 1.280 times the weight of the same volume of water. A fully charged battery will test at 1.275 - 1.280 while a discharged battery will read in the 1.140 range.

# OPERATION AND SERVICE INFORMATION

Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings

## NOTE

Do not perform a hydrometer test on a battery that has just been watered. The battery must go through at least one charge and discharge cycle in order to permit the water to adequately mix with the electrolyte.

The temperature of the **electrolyte** is important since the hydrometer reading must be corrected to 80° F (27° C). High quality hydrometers are equipped with an internal thermometer that will measure the temperature of the electrolyte and will include a conversion scale to correct the float reading. It is important to recognize that the electrolyte temperature is significantly different from the ambient temperature if the vehicle has been operated.


### Using a Hydrometer

1. Draw electrolyte into the hydrometer several times to permit the thermometer to adjust to the electrolyte temperature and note the reading. Examine the color of the electrolyte. A brown or gray coloration indicates a problem with the battery and is a sign that the battery is nearing the end of its life.
2. Draw the minimum quantity of electrolyte into the hydrometer to permit the float to float freely without contacting the top or bottom of the cylinder.
3. Hold the hydrometer in a vertical position at eye level and note the reading where the electrolyte meets the scale on the float.
4. Add or subtract four points (.004) to the reading for every 10° F (6°C) the electrolyte temperature is above or below 80° F (27° C). Adjust the reading to conform with the electrolyte temperature, e.g., if the reading indicates a specific gravity of 1.250 and the electrolyte temperature is 90° F (32° C), **add** four points (.004) to the 1.250 which gives a corrected reading of 1.254. Similarly if the temperature was 70° F (21° C), **subtract** four points (.004) from the 1.250 to give a corrected reading of 1.246 (Ref Fig. 29 on page 24).
5. Test each cell and note the readings (corrected to 80° F or 27° C). A variation of fifty points between any two cell readings (example 1.250 - 1.200) indicates a problem with the low reading cell(s).

As a battery ages the specific gravity of the electrolyte will decrease at full charge. This is not a reason to replace the battery, providing all cells are within fifty points of each other.

Since the hydrometer test is in response to a vehicle exhibiting a performance problem, the vehicle should be

recharged and the test repeated. If the results indicate a weak cell, the battery or batteries should be removed and replaced with a good battery of the same brand, type and approximate age.

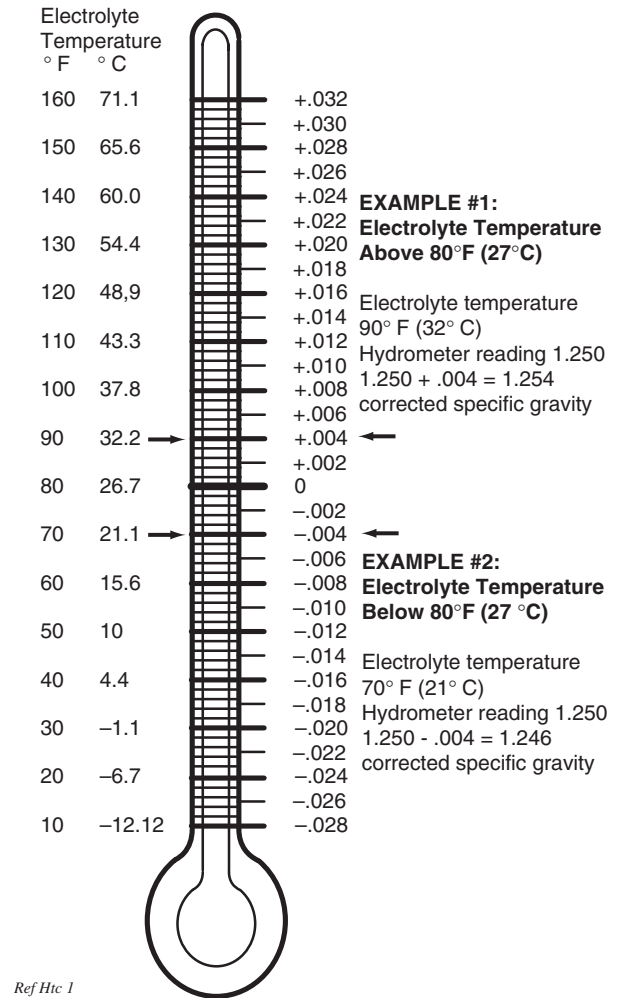

Ref H1c 1

Fig. 29 Hydrometer Temperature Correction

### BATTERY CHARGER MAINTENANCE

The only maintenance required of the charger is the periodic cleaning of the DC connector auxiliary contact.


To clean the auxiliary contact, slide an emery board between main contact and auxiliary contact located in the hole of the charger plug nearest the rounded corners (Ref on page 26). Press emery board down to apply pressure to the auxiliary contact and slide board in and out of plug approximately 10 to 20 times, keeping pressure applied to the auxiliary contact surface.

Plug charger into vehicle receptacle and wait for relay to turn on. Check to see if charger turns off by moving plug

# OPERATION AND SERVICE INFORMATION

*Read all of manual to become thoroughly familiar with this vehicle. Pay particular attention to all Notes, Cautions and Warnings*

back and forth in receptacle. If charger does turn off, repeat cleaning procedure once again. If, after recleaning and retesting, the charger still turns off while the handle is moved back and forth, check plug for a broken red wire in DC cord.

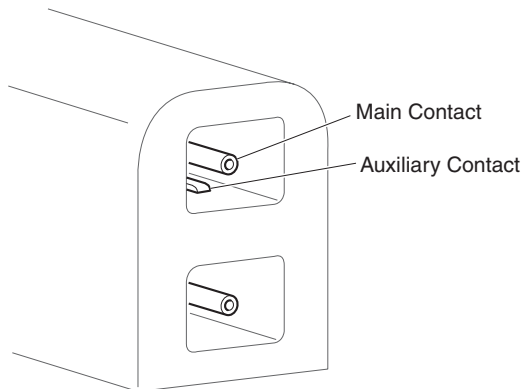

*Ref Cac 1*

**Fig. 30 Cleaning Auxillary Contact in Charger Plug**





# **GENERAL SPECIFICATIONS**

# GENERAL SPECIFICATIONS

## TXT ELECTRIC - FLEET

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 300 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Series Wound, Non Vented 2.5 hp (1.9 kw) @ 2700 rpm (1 Hour) Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	12 - 14 mph (19 - 23 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT PDS ELECTRIC - FLEET

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Shunt Wound with Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	13 - 14.5 mph (21 - 23 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT ELECTRIC - FREEDOM™ SE

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Series Wound, Non Vented 2.5 hp (1.9 kw) @ 2700 rpm (1 Hour) Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	12 - 14 mph (19 - 23 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
LIGHTING/HORN	Single Halogen Light Bar, Tail & Brake Lights, Horn
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
FEATURES	Center Basket
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT ELECTRIC - FREEDOM™ LE

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Series Wound, Non Vented 2.5 hp (1.9 kw) @ 2700 rpm (1 Hour) Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	12 - 14 mph (19 - 23 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Wood Grain with 4 Drink Holders
LIGHTING/HORN	Single Halogen Light Bar, Tail & Brake Lights, Horn
TIRES	18 x 8.00 - 10 (4 Ply Rated) Load Range B
TIRE PRESSURE	20 - 25 psi (140 - 170 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
FEATURES	Sun Top, Fold Down Windshield, Center Basket, Turn Signal with 4-Way Flasher, Wood Grain Locking Glove Box Doors
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT PDS ELECTRIC - FREEDOM™HP

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Shunt Wound with Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	17 - 19 mph (27 - 30.5 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
FEATURES	Center Basket
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT PDS ELECTRIC - FREEDOM™ SE

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Shunt Wound with Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	17 - 19 mph (27 - 30.5 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
LIGHTING/HORN	Single Halogen Light Bar, Tail & Brake Lights, Horn
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
FEATURES	Center Basket
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

## TXT PDS ELECTRIC - FREEDOM™ LE

### STANDARD EQUIPMENT:

BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 350 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Shunt Wound with Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Scorecard Holder
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 1 Passenger
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	17 - 19 mph (27 - 30.5 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Wood Grain with 4 Drink Holders
LIGHTING/HORN	Single Halogen Light Bar, Tail & Brake Lights, Horn
TIRES	18 x 8.00 - 10 (4 Ply Rated) Load Range B
TIRE PRESSURE	20 - 25 psi (140 - 170 kPa)
WEIGHT (Without Batteries)	550 lbs. (250 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
FEATURES	Sun Top, Fold Down Windshield, Center Basket, Turn Signal with 4-Way Flasher, Wood Grain Locking Glove Box Doors
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice



# GENERAL SPECIFICATIONS


## TXT ELECTRIC - SHUTTLE 2+2

### STANDARD EQUIPMENT:


BATTERIES	Six 6 Volt Deep Cycle (105 Minute Minimum, 220 Amp-Hour @ 20 Hour Discharge Rate)
SPEED CONTROLLER	Solid State, 300 Amp Capacity with Non-Contact Inductive Throttle Sensor
MOTOR	36 VDC, Series Wound, Non Vented 2.5 hp (1.9 kw) @ 2700 rpm (1 Hour) Brazed Armature and Solid Copper Windings
TRANSAXLE	12.44:1 Helical Geared with Input Pinion Shaft Directly Connected to Motor Shaft
BRAKES	Dual Rear Wheel, Self-Adjusting Mechanical Drum Brakes
PARKING BRAKE	Automatic Parking Brake Release with Self-Compensating System
FRONT SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
REAR SUSPENSION	Leaf Springs with Hydraulic Shock Absorbers
STEERING	Single Reduction Rack & Pinion
STEERING WHEEL	Dual Handgrips, Pencil Holder & Clipboard
SEATING	Cushion Foam/Vinyl Cover, Hip Restraint/Hand Hold
SEATING CAPACITY	Operator & 3 Passengers
TOTAL LOAD CAPACITY	800 lbs. (360 kg) Including Operator, Passenger, Accessories & Cargo
SPEED	12 - 14 mph (19 - 23 kph)
CHASSIS	Welded Tubular Steel; Powder Coated (DuraShield™)
BODY	Flexible, Impact Resistant DuraShield™ Injection Molded TPE (Thermoplastic Elastomer) with Base Coat/Clear Coat
STANDARD COLORS	Champagne/Hunter Green
DASH PANEL	Scuff Resistant Glass Fiber Reinforced Plastic (Thermoplastic Olefin) with 4 Drink Holders, Tee & Ball Storage
LIGHTING/HORN	Single Halogen Light Bar, Tail & Brake Lights, Horn
TIRES	18 x 8.50 - 8 (4 Ply Rated) Load Range B
TIRE PRESSURE	18 - 22 psi (124 - 152 kPa)
WEIGHT (Without Batteries)	646 lbs. (293 kg)
OPERATING CONTROLS & INSTRUMENTATION	Removable Key, 'Deadman' Accelerator Control, Direction Selector, Audible Reverse Warning, State of Charge Meter
BATTERY CHARGER	Fully Automatic, Line Compensating, 36 Volts, -or- Refer to specifications of charger supplied with vehicle For locations outside US and Canada, refer to charger manufacturer for specifications and recommendations
NOISE	Sound pressure; continuous A - weighted less than or equal to 70dB(A)
VIBRATION, WBV	The weighted RMS acceleration is 0.8 m/s <sup>2</sup>
VIBRATION, HAV	the weighted RMS acceleration; less than 2.5 m/s <sup>2</sup>

\*Specifications subject to change without notice

# GENERAL SPECIFICATIONS

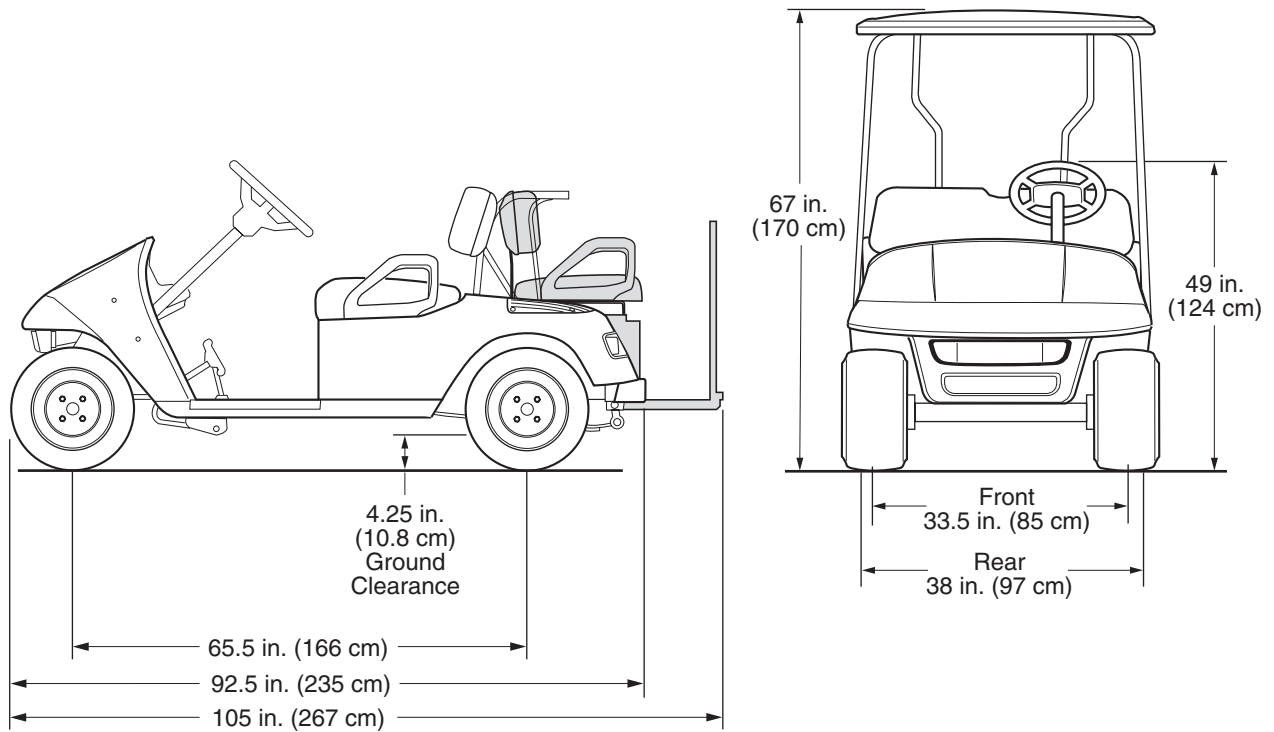


NOTE: Shaded Area Indicates SHUTTLE 2+2

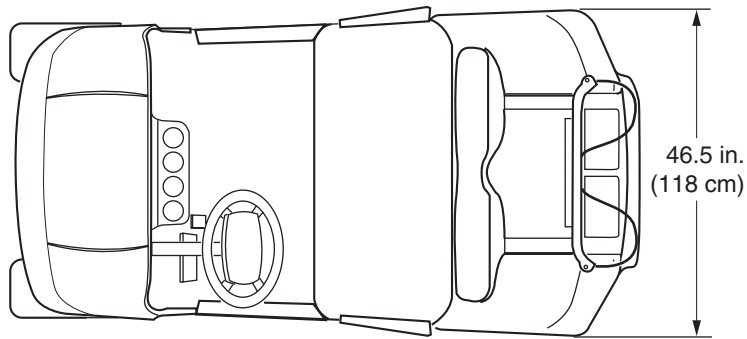


Ref Dim 1-1

**Fig. 36 Vehicle Dimensions**


# GENERAL SPECIFICATIONS

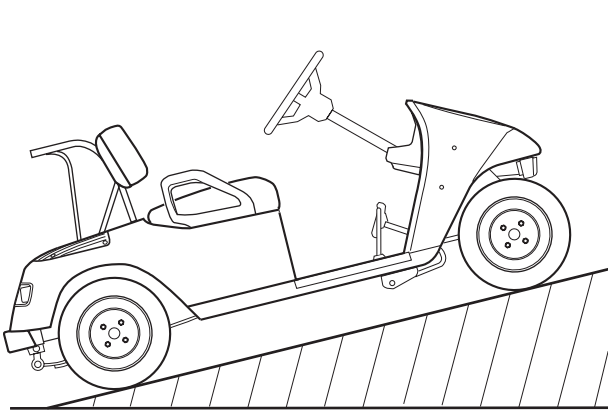

RECOMMENDED MAX RAMP  
25% GRADE or 14° MAX

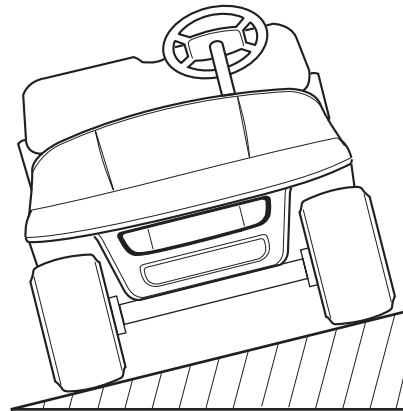

RECOMMENDED MAX SIDE TILT  
25% GRADE or 14° MAX

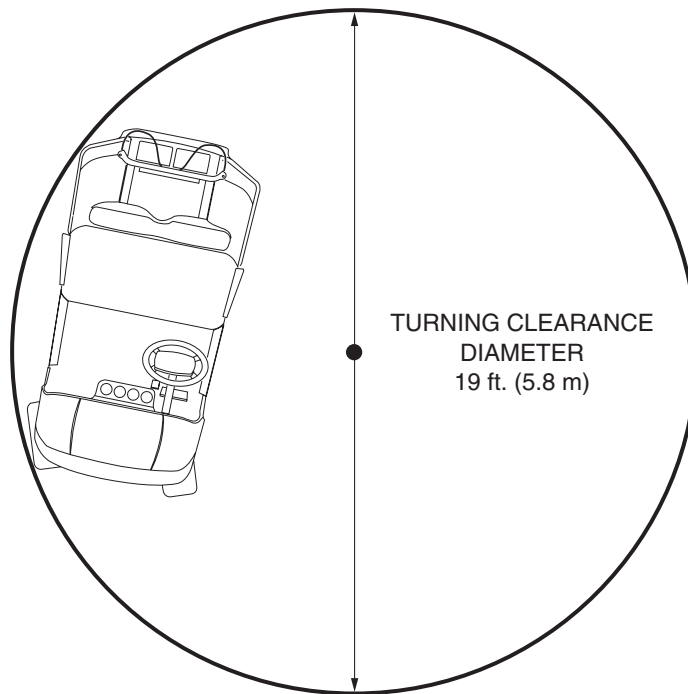

TURNING CLEARANCE  
DIAMETER  
19 ft. (5.8 m)

*Ref Dim 1-2*

**Fig. 37 Vehicle Dimensions, Incline Specifications and Turning Clearance Diameter**



# **LIMITED WARRANTIES**


# WARRANTY

## DOMESTIC WARRANTY (U.S. AND CANADA)



To obtain a copy of the limited warranty applicable to the vehicle, call or write a local distributor, authorized Branch or the Warranty Department with vehicle serial number and manufacturer date code.

# **LABELS AND PICTOGRAMS**

# LABELS AND PICTOGRAMS

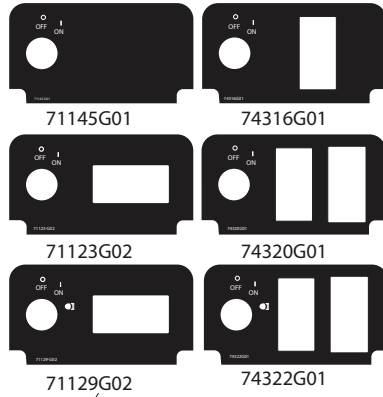

See Following Pages For Explanation Of These Pictograms (43,44,45)

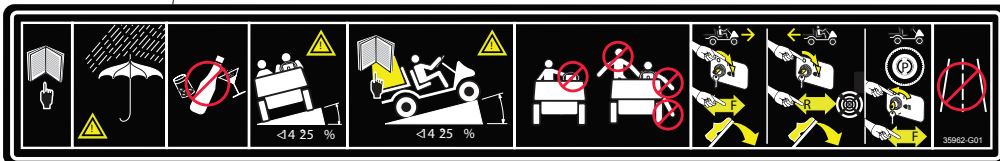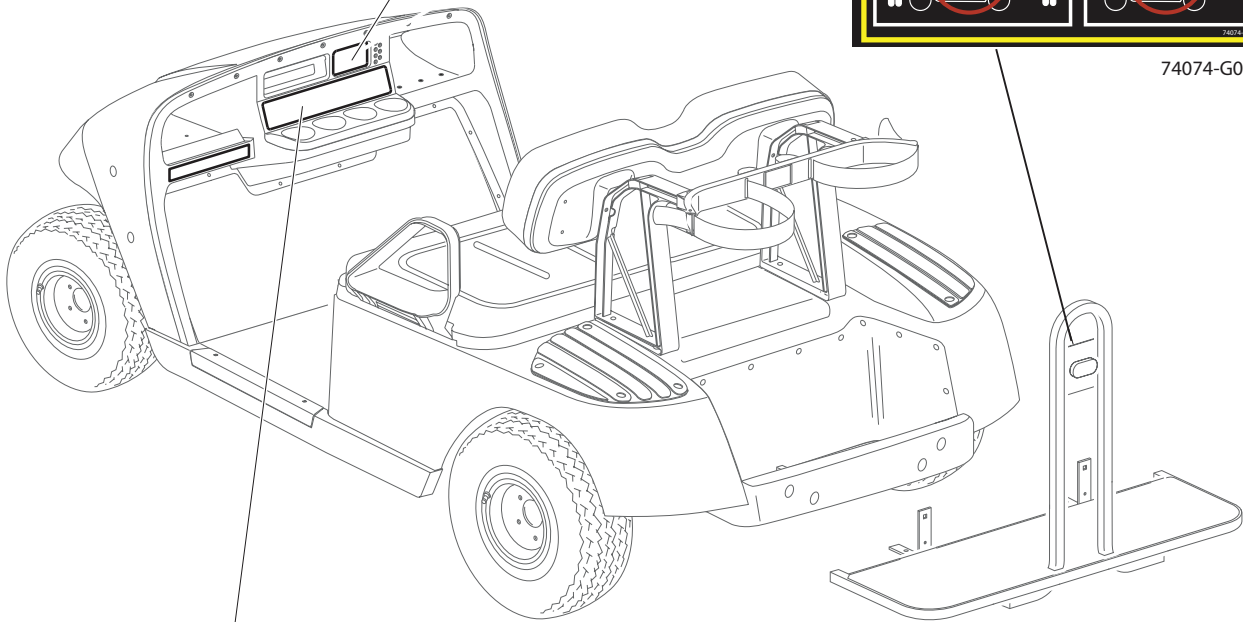

35962-G01

Ref Lal 1-1



# LABELS AND PICTOGRAMS

See Following Pages For Explanation Of Pictogram (49)




27653G01

See Following Pages For Explanation Of Pictogram (30)



EGWHL14

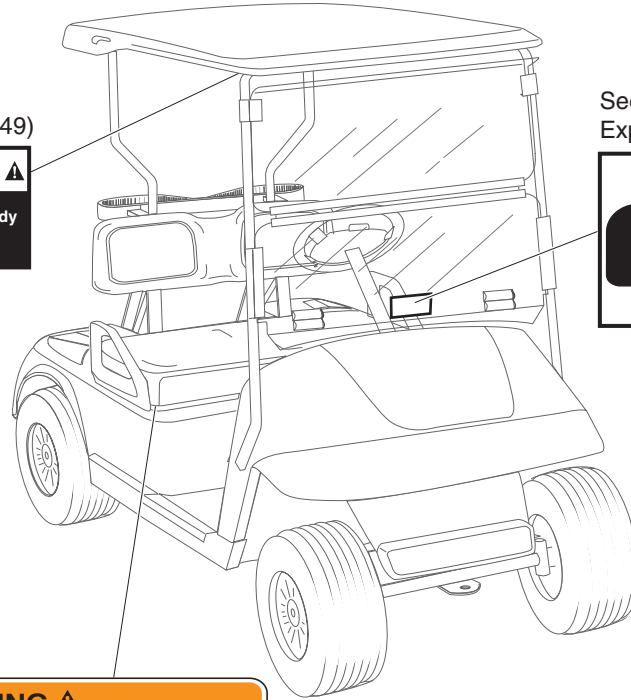

**WARNING**

73093G01

RUN  
 TOW MAINTENANCE

**TOWING**  
Always select 'TOW/MAINTENANCE' position before towing

- To disable electrical system, place switch in 'TOW/ MAINTENANCE' position and remove battery wire
- After reconnecting batteries, allow a minimum of 30 seconds before selecting 'RUN' position

**THE FOLLOWING CODES REQUIRE THAT THE REAR WHEELS BE RAISED BEFORE PERFORMING TESTS**

Beep	Fault	Symptoms	Correction Required
1-1	Controller Failure	Vehicle will not run	Check motor wiring & motor $\Omega$ . Replace controller
1-2	Throttle fault	Solenoid clicks, will not run	Replace/adjust pedal box, harness
1-4	High pedal disable	Vehicle will not run	Release pedal/check pedal box, linkage & switch
2-4	Solenoid coil failure or disconnected	Vehicle will not run	Check coil connections/wiring, replace solenoid if required
3-1	Solenoid driver fail	Vehicle will not run	Check coil wiring for shorts, replace controller
3-3	Solenoid did not close	Vehicle will not run	Check all solenoid wiring, replace solenoid if required
3-4	Field winding open	Solenoid clicks, will not run	Check motor & controller field connections, replace power harness or motor if required
4-1	Armature open	Solenoid clicks, will not run	Check motor & controller armature connections, replace power harness or motor if required
4-3	Solenoid drop out	Vehicle stops	Check solenoid/wiring, replace if required

**THE FOLLOWING CODES REQUIRE THAT THE VEHICLE BE OPERATED UNDER LOAD WHILE PERFORMING TESTS**

Beep	Fault	Symptoms	Correction Required
1-3	Speed sensor fault	Vehicle runs slowly	Check speed sensor connections & magnet/torque, replace speed sensor if required
2-1	Low battery voltage	Vehicle performance reduced	Charge batteries/replace bad batteries
2-2	High battery voltage	Regen performance reduced	Check that battery voltage is less than 48 VDC
2-3	Thermal cutback	Vehicle performance reduced	Allow controller to cool, check heat sink bolt torque
3-2	Solenoid welded	Vehicle runs slowly	Check auxiliary power. Replace solenoid
4-2	Motor stalled	Vehicle stopped	Remove mechanical blockage

To enter diagnostic mode  $\blacklozenge$  Turn key switch to 'OFF'  $\blacklozenge$  Move 'RUN/TOW MAINTENANCE' switch to 'RUN'.  $\blacklozenge$  Move direction selector switch from neutral position to 'REV' position five (5) times  $\blacklozenge$  After a confirming beep(s) sounds, the diagnostic fault code will sound when a fault is detected. To exit diagnostic mode: Select 'TOW MAINTENANCE' position.

73093G01

Raise Seat To Find This Label Located On The Passenger Side Affixed To The Controller Cover.

See Following Pages For Explanation Of These Pictograms (1,43,44,50)


# LABELS AND PICTOGRAMS

1.



**WARNING**

2.

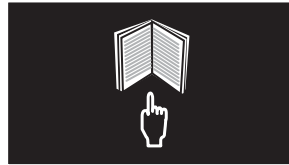

READ MANUAL

3.



**WARNING**  
USE CAUTION IN  
INCLEMENT WEATHER

4.



**WARNING**  
DO NOT OPERATE  
UNDER THE INFLUENCE  
OF DRUGS OR ALCOHOL

5.



MAXIMUM  
CROSS HILL/RAMP  
ANGLE AS SPECIFIED

6.




**WARNING**  
MAXIMUM CROSS  
HILL/RAMP  
ANGLE AS  
SPECIFIED

7.




LOAD WITH  
HIGH CENTER  
OF GRAVITY  
COULD RESULT  
IN TIP OVER

8.

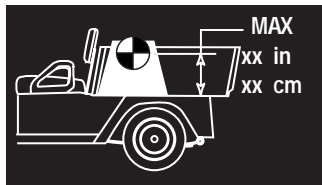


LOAD  
CENTER  
OF GRAVITY,  
MAXIMUM  
HEIGHT

9.

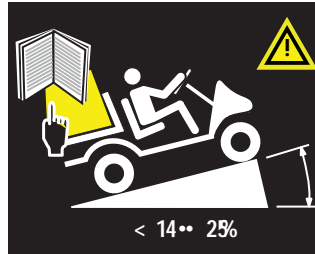

**WARNING**  
READ MANUAL  
FOR MAXIMUM  
LOAD BED  
CAPACITY.  
MAXIMUM RAMP/HILL

10.

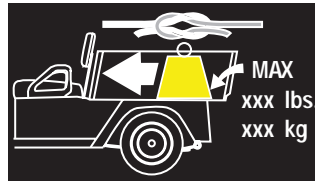

SECURE LOAD  
AS FAR FORWARD  
AS POSSIBLE  
MAXIMUM LOAD BED  
CAPACITY

11.




DO NOT RIDE IN  
LOAD BED

12.




**DANGER OF EXPLOSION**  
DO NOT FILL GAS CAN  
IN LOAD BED

13.

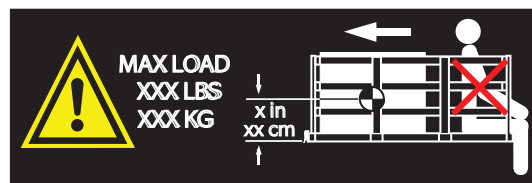

**WARNING**  
MAXIMUM LOAD  
& CENTER OF  
GRAVITY.  
KEEP LOAD  
AS FAR  
FORWARD AS  
POSSIBLE  
DO NOT RIDE  
IN LOAD BED

14.

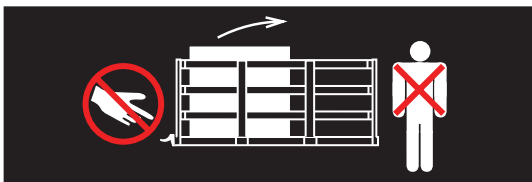






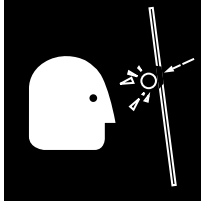















KEEP HANDS &  
FINGERS AWAY  
FROM DUMP BED.  
DO NOT STAND  
BEHIND DUMP  
BED

Ref Pic 1-1

**NOTE: Not all Pictograms may apply to your Product.**







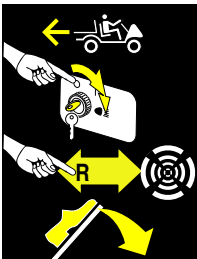

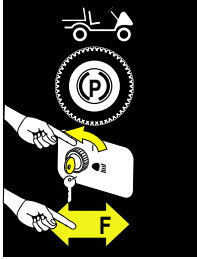
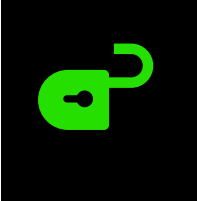
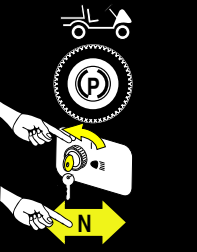

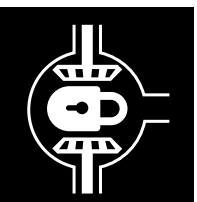

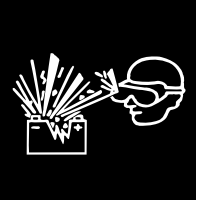
# LABELS AND PICTOGRAMS

- |     |   |  |     |   |   |
|-----|---|--|-----|---|---|
| 15. |    | CLEAN UP GASOLINE SPILLS WITH WATER BEFORE STARTING ENGINE | 27. |    | DO NOT EXPOSE TO FLAME                                    |
| 16. |    | UNLEADED GASOLINE  | 28. |    | DO NOT DISPOSE OF BATTERIES IN LANDFILL                   |
| 17. |    | DO NOT SPILL FUEL ON A HOT ENGINE                          | 29. |    | DO NOT DRIVE ON HIGHWAY                                   |
| 18. |    | GROUND FUEL PUMP   | 30. |    | WINDSHIELDS DO NOT PROVIDE PROTECTION FROM FLYING OBJECTS |
| 19. |    | LOW OIL PRESSURE   | 31. |   | BATTERIES ARE HEAVY. USE CARE LIFTING                     |
| 20. |    | NEGATIVE GROUND BATTERY                                    | 32. |  | USE INSULATED TOOLS                                       |
| 21. |   | DO NOT CONNECT POSITIVE BATTERY TERMINAL TO GROUND         | 33. |  | WEAR EYE PROTECTION                                       |
| 22. |  | SHORTING BATTERY TERMINALS MAY CAUSE EXPLOSION             | 34. |  | NO SMOKING  |
| 23. |  | NO TAMPERING. KEEP HANDS OUT                               | 35. |  | HOT SURFACE   |
| 24. |  | WARNING CORROSIVE  |     |   |   |
| 25. |  | WARNING EXPLOSIVE  |     |   |   |
| 26. |  | WARNING LETHAL VOLTAGE                                     |     |   |   |

Ref Pic 1-2

**NOTE: Not all Pictograms may apply to your Product.**

# LABELS AND PICTOGRAMS

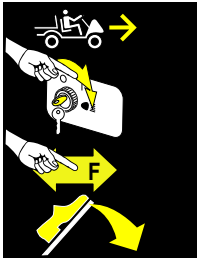- |     |   |  |     |  |   |
|-----|---|--|-----|--|---|
| 36. |    | <p>OPERATE FROM DRIVERS SIDE ONLY</p>  | 42. |    | <p>KEEP CLEAR HAND OR FINGERS CAN BE TRAPPED</p>  |
| 37. |    | <p>KEEP ARMS AND LEGS WITHIN VEHICLE</p>   | 43. |    | <p>ON POSITION</p>  |
| 38. |    | <p>TO OPERATE VEHICLE IN FORWARD:<br/>           * TURN KEY TO ON<br/>           * MOVE DIRECTION SELECTOR TO FORWARD<br/>           * DEPRESS ACCELERATOR PEDAL AND ACCELERATE SMOOTHLY</p>   | 44. |    | <p>OFF POSITION</p>   |
| 39. |  | <p>TO OPERATE VEHICLE IN REVERSE:<br/>           * TURN KEY TO ON<br/>           * MOVE DIRECTION SELECTOR TO REVERSE<br/>           * AN AUDIBLE DEVICE WILL SOUND<br/>           * DEPRESS ACCELERATOR PEDAL AND ACCELERATE SMOOTHLY</p> | 45. |    | <p>HEADLIGHTS</p>   |
| 40. |  | <p>TO LEAVE A GASOLINE POWERED VEHICLE IN PARK:<br/>           * APPLY PARKING BRAKE<br/>           * TURN KEY TO OFF<br/>           * MOVE DIRECTION SELECTOR TO FORWARD</p>  | 46. |    | <p>UNLOCKED</p>   |
| 41. |  | <p>TO LEAVE AN ELECTRIC POWERED VEHICLE IN PARK:<br/>           * APPLY PARKING BRAKE<br/>           * TURN KEY TO OFF<br/>           * MOVE DIRECTION SELECTOR TO NEUTRAL</p>   | 47. |   | <p>LOCKED</p>   |
|     |   |  | 48. |  | <p>DIFFERENTIAL LOCKED</p>  |
|     |   |  | 49. |  | <p><b>WARNING</b><br/>           KEEP ENTIRE BODY INSIDE CAR</p>                                      |
|     |   |  | 50. |  | <p><b>WARNING</b><br/>           POSSIBLE ELECTRIC ARC OR BATTERY EXPLOSION. WEAR EYE PROTECTION.</p> |

Ref Pic 1-3

**NOTE: Not all Pictograms may apply to your Product.**

**DECLARATION OF CONFORMITY  
(EUROPE ONLY)**

# DECLARATION OF CONFORMITY

EC Declaration of Conformity • Déclaration de Conformité CE • EG Conformiteits-Declaratie • EG-Konformitätsbescheinigung • Certificato di Conformità CE • EF Konformitetserklæring • EU Uppfyllandecertifikat • Ilmoitus yhdenmukaisuudesta ey:n sääntöjen kanssa • Declaración de Conformidad de la CE • Declaração de Conformidade da CE

We hereby declare that the product • Par la présente, nous déclarons que le produit • Hierbij verklaren we dat het product • Wir erklären hiermit, dass das Produkt • Con la presente dichiariamo che il prodotto • Vi erklærer herved, at produktet • Vi deklarerer härmed att produkten • Ilmoitamme täten, että tuote • Declaramos que el producto • Pela presente, declaramos que o produto:

Product Name • Nom du produit • Productnaam • Produktname • Nome del prodotto • Produktnavn • Produktens namn • Tuotenimi • Producto • Nome do produto: ..... TXT Golf Car & Freedom Golf Car– Electric & PDS-E

Models • Modèles • Modellen • Modelle • Modelli • Modeller • Modellerna • Mallit • Modelos • Modelos: ..... TXT-E, TXT-coastal– E, TXT-Freedom-E SE, LE  
TXT-PDS-E, TXT-PDS-coastal-E, TXT-Freedom-PDS-E SE, LE  
TXT 2+2– E

Product Numbers • Numéros de produit • Productnummers • Produktnummern • Numeri del prodotto • Produktnumre • Produktnummer • Tuotenumerot • Números de producto • Números de produto: ..... 76080, 76105, 76112, 76172, 76173, 76180, 76181, 76184, 76185

Product Description • Description du produit • Productbeschrijving • Produktbeschreibung • Product Description • Produktbeskrivelse • Produktbeskrivning • Tuotteen kuvaus • Descrizione del prodotto • Descrição do Produto: ..... Four wheeled, electric battery powered fleet and Freedom golf cars

To which this Declaration relates is in conformity with the following standard(s) or other normative documents • Auquel se réfère cette déclaration est conforme à la/aux norme(s) suivante(s) ou autres documents normatifs • Naar welke deze Verklaring verwijst, in conformiteit is met de volgende standaard(s) of andere normatieve documenten • Auf das sich diese Erklärung bezieht, den folgenden Normen und anderen normengleichen Unterlagen entspricht • Al quale la presente dichiarazione si riferisce, è conforme alle norme o ad altri documenti normativi di seguito citati • Som denne erklæring vedrører, er i overensstemmelse med følgende standard(er) eller andre normgivende dokumenter • Till vilken denna deklARATION relaterar uppfyller följande standard(er) eller andra normgivande dokument • Johon tämä ilmoitus liittyy, on seuraavien standardien tai muiden normien mukainen • A los que esta declaración se aplica cumple los siguientes estándares o documentos normativos • Ao qual esta declaração diz respeito, se encontra em conformidade com a(s) seguinte(s) norma(s) ou outra legislação.


Machinery Directive • Directive relative aux machines • Richtlijn voor machinerie • Maschinenrichtlinie • Direttiva sui macchinari • Maskindirektiv • Maskindirektiv • Konedirektiivi • Directiva sobre maquinaria • Directiva sobre máquinas: ..... 98/37/EC:1998 Annex 1

Electromagnetic Compatibility (EMC) Directive • Directive de compatibilité électromagnétique (CEM) • Richtlijn voor elektromagnetische compatibiliteit (EMC) • Richtlinie über elektromagnetische Verträglichkeit (EMV) • Direttiva sulla compatibilità elettromagnetica (EMC) • Direktiv om elektromagnetisk kompatibilitet (EMC) • Elektromagnetiska kompatibilitetsdirektiv (EMC) • Sähkömagneettista yhteensopivuutta (EMC) koskeva direktiivi • Directiva de compatibilidad electromagnética • Directiva sobre compatibilidade magnética (EMC): ..... EN 61000-6-2:2005  
EN 61000-6-4:2001

Garden equipment: Powered lawnmowers; Safety • Equipements de jardin : Tondeuses à moteur ; Sécurité • Tuinapparatuur: Aangedreven gazonmaaimachine; Veiligheid • Gartengeräte: angetriebene Rasenmäher; Sicherheit • Attrezzature per giardini: tosaerba elettrici; Sicurezza • Haveudstyr: Motoriserede plæneklippere, sikkerhed • Trädgårdsutrustning: Motorförsedda gräsklippare, säkerhet • Puutarhakoneet: Moottoroidut ruohonleikkurit; Turvallisuus • Equipos para jardín: cortacéspedes; seguridad • Equipamento de jardim: corta-relvas motorizados; Segurança: ..... EN 836

Normative References • Références normatives • Normatieve referenties • Normengleiche Unterlagen • Riferimenti alle normative • Normgivende referencer • Normativa referenser • Normiviittaukset • Referencias normativas ..... 73/23/EEC, 89/336/EECCEN EN 1050, CENELEC EN 60204-1CEN EN 563  
CEN EN 292-1, CEN EN 292-2CEN EN 953, CEN EN 418 CEN EN 954-1,  
CEN EN 349, CEN EN 1037, EN EN 547-1, CEN EN 547-2, CEN EN 547-3

As a representative of E-Z-GO a Textron Company • En qualité de représentant d'E-Z-GO a Textron Company • Als vertegenwoordiger van E-Z-GO a Textron Company • Als Vertreter von E-Z-GO a Textron Company • In veste di rappresentante di E-Z-GO a Textron Company • E-Z-GO a Textron Company-virksomhed • Säsom varande representant för E-Z-GO a Textron Company • E-Z-GO a Textron Company edustaja • Como representante de E-Z-GO a Textron Company • O representante da E-Z-GO a Textron Company:

  
Susan E. Rutt  
Vice President of Engineering  
E-Z-GO a Textron company  
1451 Marvin Griffin Rd.  
Augusta, Ga 30906 USA

Date: 13 JUN 07



# DECLARATION OF CONFORMITY

ΕΕ Δήλωση Συμμόρφωσης •  
Prohlášení o shodě ES • Dikjarazzjoni ta' Konformità tal-KE • EÜ vastavusavaldus •  
Deklaracja zgodności WE • EC Megfelelősségi nyilatkozat •  
Izjava ES o skladnosti • EC Atbilstības deklarācija •  
EC Vyhlášení o zhode • EC Uyum Beyanı

Με την παρούσα δηλώνουμε ότι το προϊόν • Tímto prohlašujeme, že výrobek • Na niddikjaraw li l-prodott • Käesolevaga anname me teada, et toode • Niniejszym zaświadczamy, że produkt • Kijelentjük, hogy az alábbi termék • S tem izjavljamo, da je izdelek • Ar do paziňojam, ka produkts • Týmto potvrdzujeme, že výrobok • Ýpbu Bildirimin konusu olan ürünün:

Όνομα Προϊόντος • Název výrobku • Isem tal-Prodott • Toote nimetus •  
Nazwa produktu • Termék neve • Ime izdelka • Produkta nosaukums •  
Názov výrobku • Ürün Adı: .....TXT Golf Car & Freedom Golf Car- Electric & PDS-E

Μοντέλα • Modely • Mudelli • Modelid • Modelle •  
Modellek • Modeli • Modelis • Modely • Modeller: .....TXT-E, TXT-coastal- E, TXT-Freedom-E SE, LE  
TXT-PDS-E, TXT-PDS-coastal-E, TXT-Freedom-PDS-E SE, LE  
TXT 2+2- E

Αριθμοί Προϊόντος • Èisla vÝrobku • Numri tal-Prodotti • Toote numbrid •  
Numery produktu • Termékszámok • Številke izdelka • Produkta numurs •  
Čísła výrobku • Ürün Numaraları: .....76080, 76105, 76112, 76172, 76173, 76180, 76181, 76184, 76185

Περιγραφή Προϊόντος • Popis výrobku • Deskripcjoni tal-Prodott • Toote kirjeldus •  
Opis produktu • Termékleírás • Opis izdelka • Produkta apraksts • Popis výrobku •  
Ürün Açıklaması: .....Four wheeled, electric battery powered fleet and Freedom golf cars

Στο οποίο αφορά η παρούσα Δήλωση συμμορφώνεται με το (τα) ακόλουθο (α) πρότυπο (α) ή άλλα κανονιστικά έγγραφα • K nímuz se vzťahuje toto prohlášení, je ve shodě s následujícími normami nebo jinými normativními dokumenty • Alih din id-Dikjarazzjoni ta' Konformità tal-KE, hu konformi ma' l-istandard(s) li ejjin jew ma' rajn • See, millele see deklaratsioon toetub, on kooskõlas järgnevat standarditega või muude normatiivdokumentidega • Do kórego odnosi się niniejsza deklaracja spełnia następujący(e) wymóg (wymogi) i przepisy • Amelyre a jelen nyilatkozat vonatkozik, megfelel a következő szabvány(ok)nak vagy egyéb jogszabályi előírásoknak • Na katerega se ta izjava nanaša, v skladu s sledečimi standardi ali drugimi normativnimi dokumenti • Uz kuru attiecas šī Deklarācija, atbilst šādām (- iem) standartam (- iem) vai citiem normatīvajiem dokumentiem • Ktorého sa týka toto vyhlášení, je v súlade s nasledovnou normou (nasledovnými normami) a inými normatívnymi dokumentmi • Aşağıdaki standartlar veya diğer düzenleyici belgelere uygun olduunu beyan ederiz.


Οδηγία για τα Μηχανήματα • Strojirenská smernice • Direktiva dwar il-Makkinarju •  
Tootmisseedate direktiiv • Dyrektywa Maszynowa • Gépekről szóló irányelv •  
Direktiva o strojih • Madīnu direktīva • Smernica o strojoch • Makine Direktifi: .....98/37/EC:1998 Annex 1

Οδηγία για την Ηλεκτρομαγνητική Συμβατότητα (EMC) • Smernice o elektromagnetické slúžitelnosti (EMC) •  
Direktiva dwar il-Kompatibilità Elettromagnetika (EMC) • Elektromagneetilise ühtivuse (EMC) direktiiv •  
Dyrektywa Kompatybilności Elektromagnetycznej (EMC) • Elektromágneses összeférhetőségről szóló (EMC) irányelv •  
Direktiva o elektromagnetni združljivosti (EMC) • Elektromagnētiskās savietojamības (EMC) direktīva •  
Smernica o elektromagnetickéj kompatibilite (EMC) •  
Elektromanyetik Uygunluk (EMC) Direktifi: .....EN 61000-6-2:2005  
EN 61000-6-4:2001

Εξοπλισμός κήπου: Μηχανοκίνητες χλοοκοπτικές μηχανές, Ασφάλεια • Zahradní vybavení: Sekačky na trávu s pohonem; bezpečnost •  
Mír tal-nien: Lawnmowers ta' l-elekttriku; Sigurtà • Alatóörliistad: Elektri- või mootormuruniidukid; Ohutus •  
Wyposażenie ogrodu: Kosiarki do trawy z napędem; Bezpieczeństwo • Kerti felszerelés: Elektromos fűnyíró; biztonság •  
Oprema za vrt: električna vrtna kosilnica; varnost • Dārza aprīkojuma: zāles pārgājēju pāraujmašīnu; drošības •  
Záhradné zariadenie: kosačky na trávu s pohonom; bezpečnosť •  
Bahçe ekipmanları: Elektrikli çim biçme makineleri; Güvenlik: .....EN 836

Κανονιστικές Αναφορές • Normatīvi odkazy • Referenzi Normattivi •  
Viited normatiividele • Odpowiednie akty prawne • Rendelkező hivatkozások •  
Normativne reference • Normatīvās atsauces • Normativne referencie •  
Normatif Referanslar: .....73/23/EEC, 89/336/EECCEN EN 1050, CENELEC EN 60204-1CEN EN 563  
CEN EN 292-1, CEN EN 292-2CEN EN 953, CEN EN 418 CEN EN 954-1,  
CEN EN 349, CEN EN 1037, EN EN 547-1, CEN EN 547-2, CEN EN 547-3

Ός εκπρόσωπος της E-Z-GO a Textron Company • Jako zástupce firmy E-Z-GO a Textron Company • Ala rapprezentant ta' E-Z-GO a Textron Company • E-Z-GO a Textron Company esindajana • W imieniu E-Z-GO a Textron Company • Az E-Z-GO a Company képviselőjeként • Kot zastopnik družbe E-Z-GO a Textron Company • E-Z-GO a Textron Company uzticēgums • Zástupca E-Z-GO a Textron Company • E-Z-GO a Textron Company'nun temsilcisi olarak:

  
Susan E. Rutt  
Vice President of Engineering  
E-Z-GO a Textron company  
1451 Marvin Griffin Rd.  
Augusta, Ga 30906 USA

Date: 13/11/07







## NOTE

Read and understand the following warnings before attempting to operate the vehicle:

## WARNING

**To prevent personal injury or death, observe the following:**

**When vehicle is to be left unattended, engage park brake, move direction selector to neutral, turn key to 'OFF' position and remove key.**

**Drive vehicle only as fast as terrain and safety considerations allow. Consider the terrain and traffic conditions. Consider environmental factors which effect the terrain and the ability to control the vehicle.**

**Avoid driving fast down hill. Sudden stops or change of direction may result in a loss of control. Use service brake to control speed when traveling down an incline.**

**Use extra care and reduced speed when driving on poor surfaces, such as loose dirt, wet grass, gravel, etc.**

**All travel should be directly up or down hills.**

**Use extra care when driving the vehicle across an incline.**

**Stay in designated areas and avoid steep slopes. Use the park brake whenever the vehicle is parked.**

**Keep feet, legs, hands and arms inside vehicle at all times.**

**Avoid extremely rough terrain.**

**Check area behind the vehicle before operating in reverse.**

**Make sure the direction selector is in correct position before attempting to start the vehicle.**

**Slow down before and during turns. All turns should be executed at reduced speed.**

**Always bring vehicle to a complete stop before shifting the direction selector.**

**See GENERAL SPECIFICATIONS for vehicle load and seating capacity.**

## NOTE

Read and understand the following text and warnings before attempting to service vehicle:

In any product, components will eventually fail to perform properly as the result of normal use, age, wear or abuse.

It is virtually impossible to anticipate all possible component failures or the manner in which each component may fail.

Be aware that a vehicle requiring repair indicates that the vehicle is no longer functioning as designed and therefore should be considered potentially hazardous. Use extreme care when working on any vehicle. When diagnosing, removing or replacing any components that are not operating correctly, take time to consider the safety of yourself and others around you should the component move unexpectedly.

Some components are heavy, spring loaded, highly corrosive, explosive or may produce high amperage or reach high temperatures. Battery acid and hydrogen gas could result in serious bodily injury to the technician/mechanic and bystanders if not treated with the utmost caution. Be careful not to place hands, face, feet or body in a location that could expose them to injury should an unforeseen situation occur.

Always use the appropriate tools listed in the tool list and wear approved safety equipment.

## WARNING

**Before working on the vehicle, remove all jewelry (rings, watches, necklaces, etc.)**

**Be sure no loose clothing or hair can contact moving parts.**

**Use care not to touch hot objects.**

**Raise rear of vehicle and support on jack stands before attempting to run or adjust powertrain.**

**Wear eye protection when working on or around the vehicle. In particular, use care when working around batteries, using solvents or compressed air.**

**Hydrogen gas is formed when charging batteries. Do not charge batteries without adequate ventilation.**

**Do not permit open flame or anyone to smoke in an area that is being used for charging batteries. A concentration of 4% hydrogen gas or more is explosive.**



A Textron Company

**E-Z-GO Division of Textron, Inc.,**  
1451 Marvin Griffin Road, Augusta, Georgia USA 30906-3852

**TO CONTACT US...**

North America:

**Technical Assistance & Warranty  
Service Parts**

Phone: 1-800-774-3946, FAX: 1-800-448-8124

Phone: 1-888-GET-E-Z-GO (1-888-438-3946), FAX: 1-800-752-6175

International:

Phone: 001-706-798-4311, FAX: 001-706-771-4609

Certified ISO 9001 / ISO 14001 by



Copyrighted Material  
This manual may not be reproduced in whole or  
in part without the express permission of  
E-Z-GO Division of Textron, Inc.  
Technical Communications Department